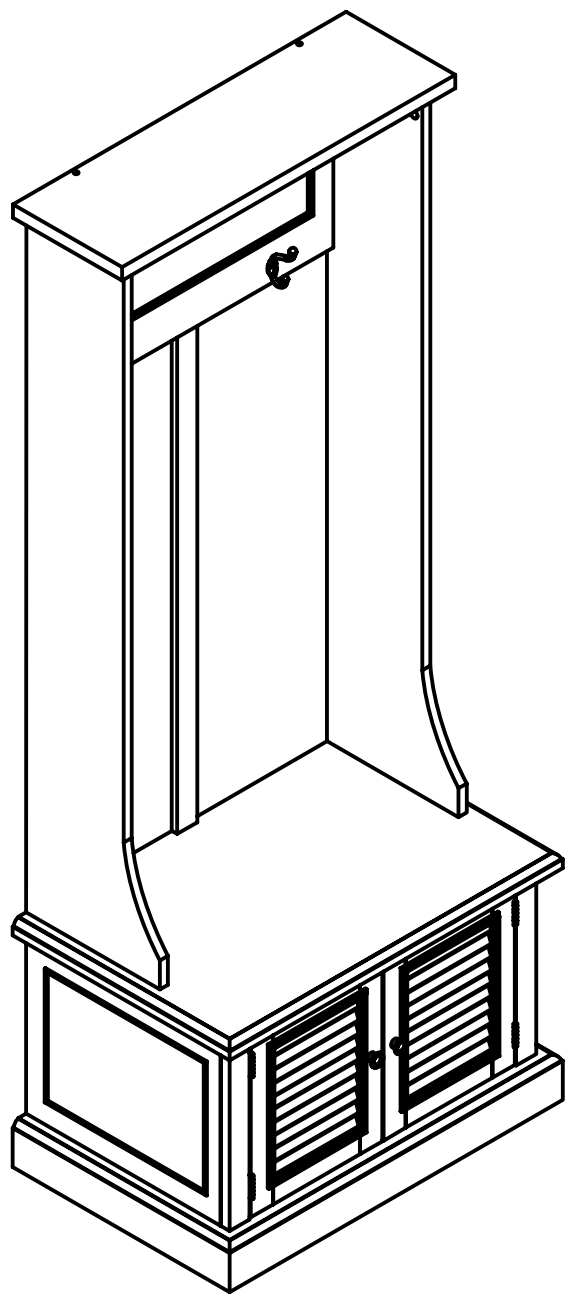
HOME
DECORATORS
COLLECTION

SK17012 SHUTTER HALL TREE SINGLE 74"Hx29.5"Wx19"D

INV#11574

ASSEMBLY INSTRUCTIONS

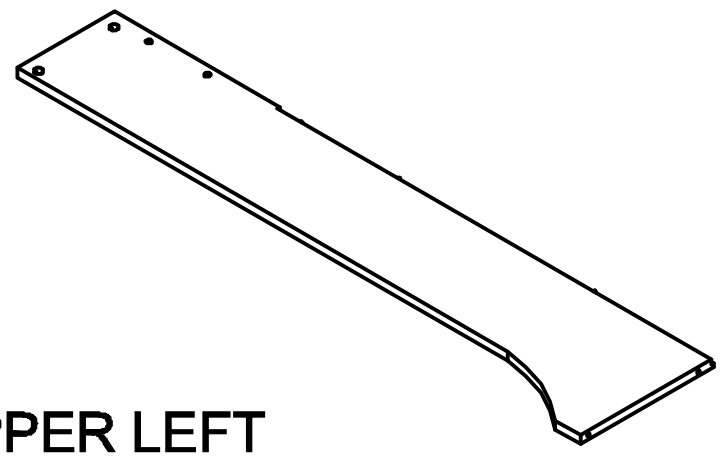
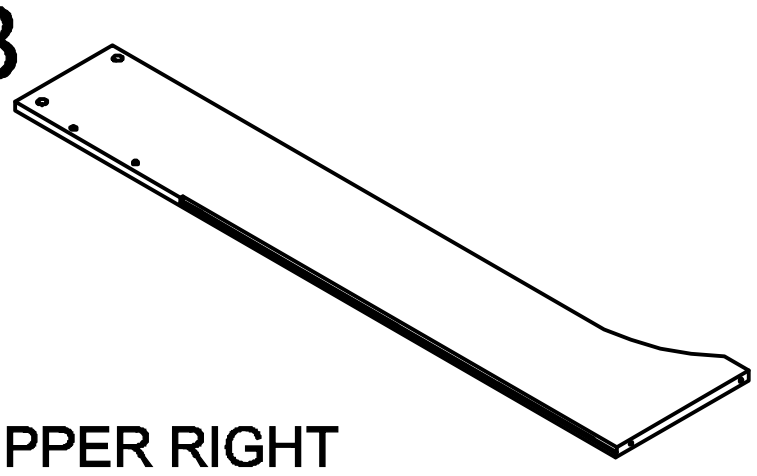
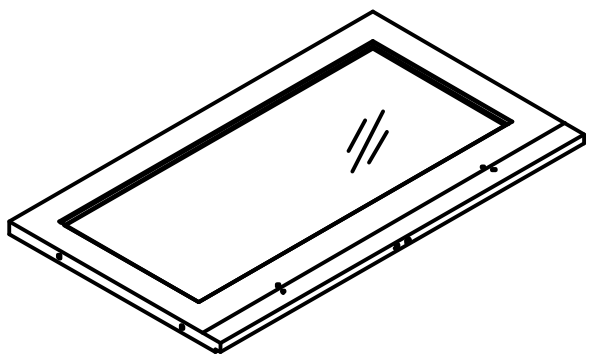
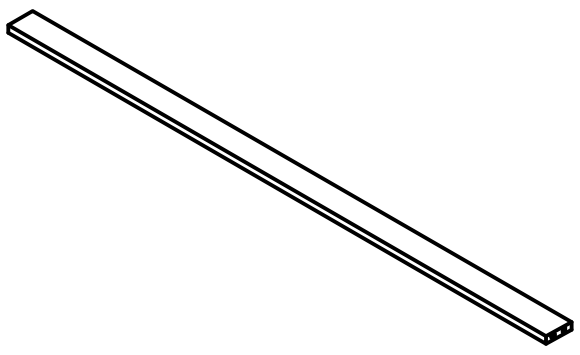
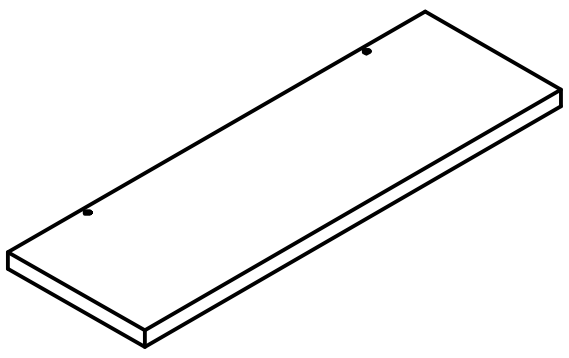
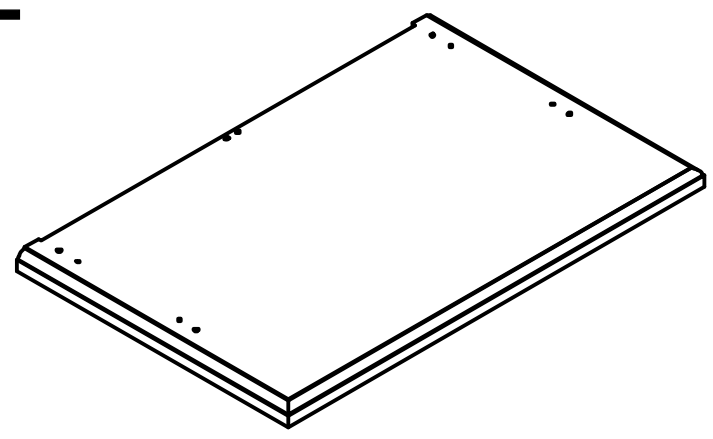
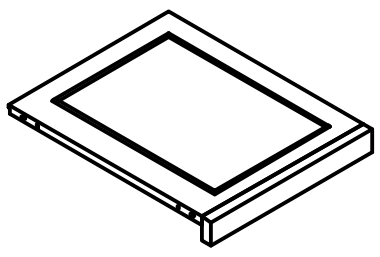
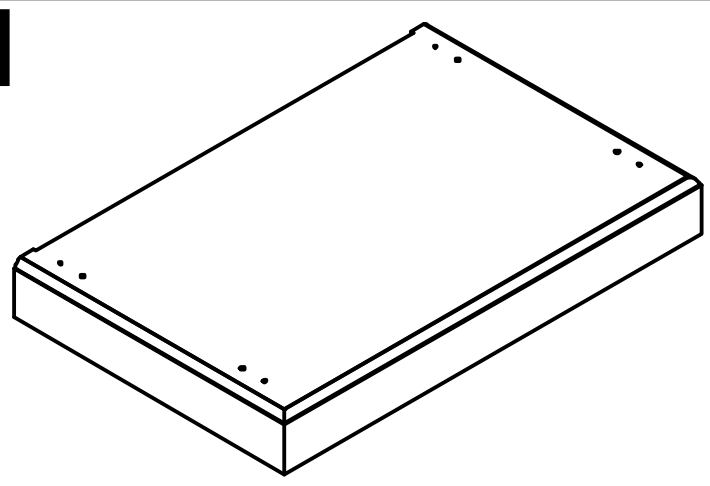
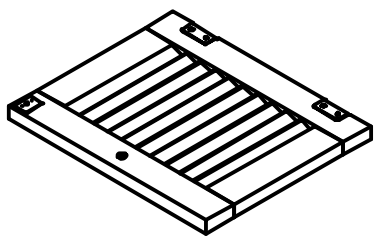
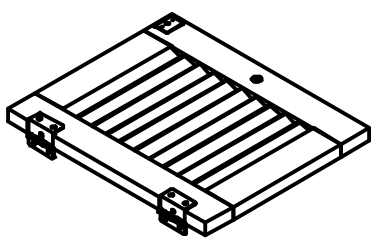
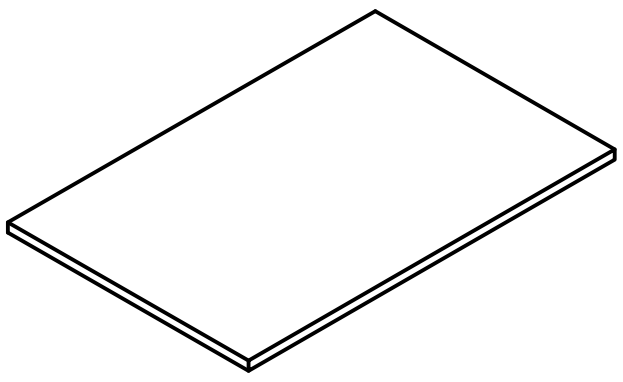
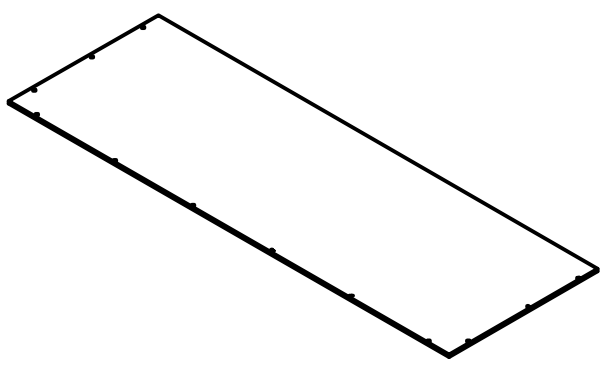
Made In China














Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast,easy and correct assembly.


PARTS LIST


A  UPPER LEFT SIDE PANEL-1PC	B  UPPER RIGHT SIDE PANEL-1PC	C  TOP MIRROR FRAME-1PC
D  BACK SUPPORT SLAT-1PC	E  TOP PANEL-1PC	F  FIXED SHELF-1PC
G  LOWER SIDE PANEL-2PCS	H  BOTTOM PANEL-1PC	I  LEFT DOOR-1PC
J  RIGHT DOOR-1PC	K  ADJUSTABLE SHELF-1PC	L  UPPER BACK PANEL-2PCS

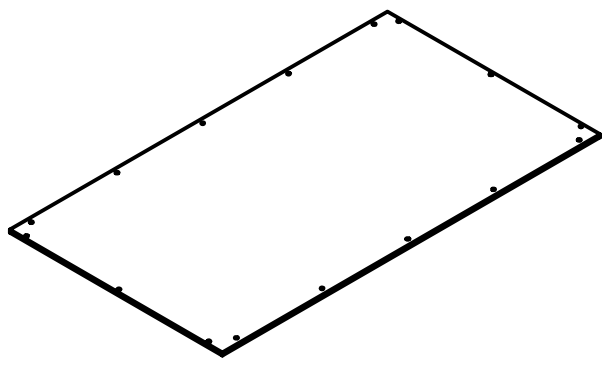M  LOWER BACK PANEL-1PC		
a  WOOD DOWEL-27PCS	b  CAM LOCK BOLT-12PCS	c  CAM LOCK-12PCS
d  5/8"L ROUND HEAD SCREW-47PCS	e  SHORT PLASTIC COVER-8PCS	f  KNOB-2PCS
g  KNOB BOLT-2PCS	h  1-1/2" FLAT HEAD SCREW-6PCS	i  MAGNET-1PC
j  1/2"L FLAT HEAD SCREW-12PCS	k  LONG PLASTIC COVER-4PCS	l  DOUBLE HOOK-2PCS
m  METAL PLATE-5PCS	n  SHELF PIN-4PCS	

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

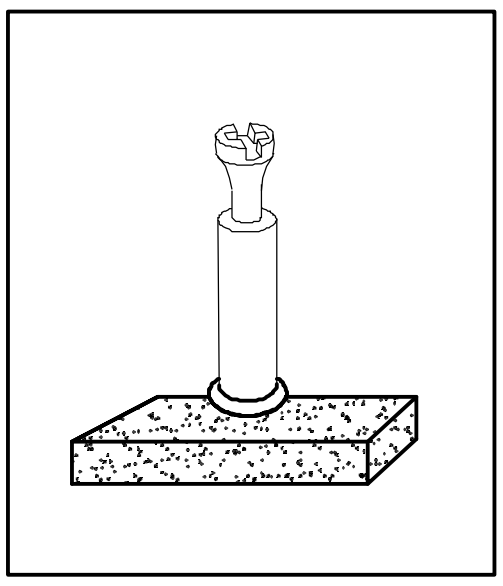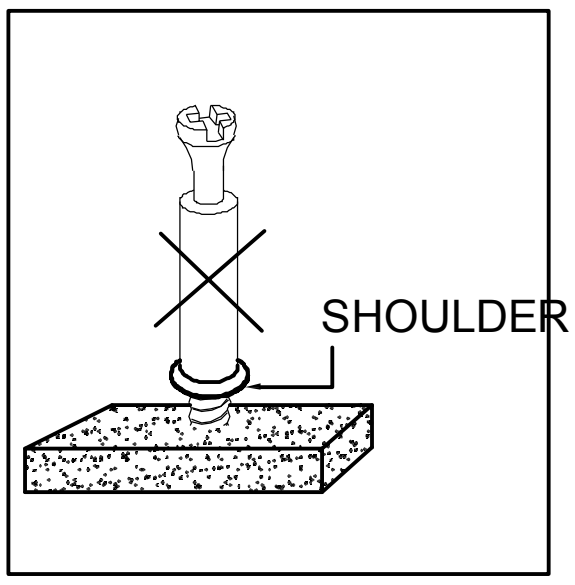
NOTE: ● UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.






NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

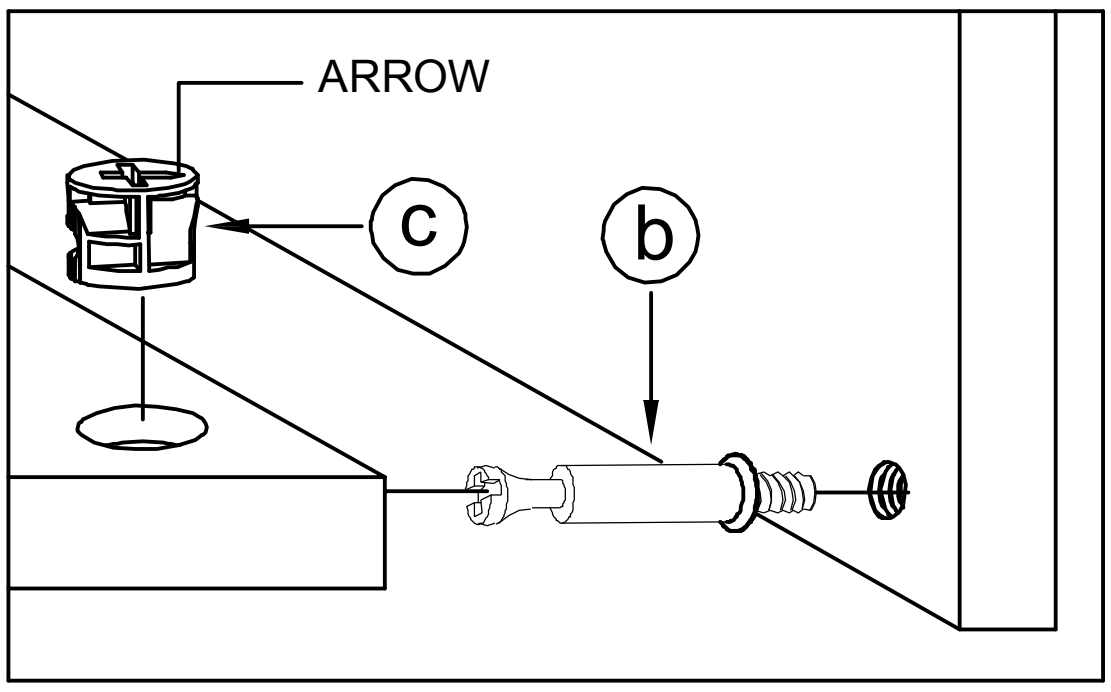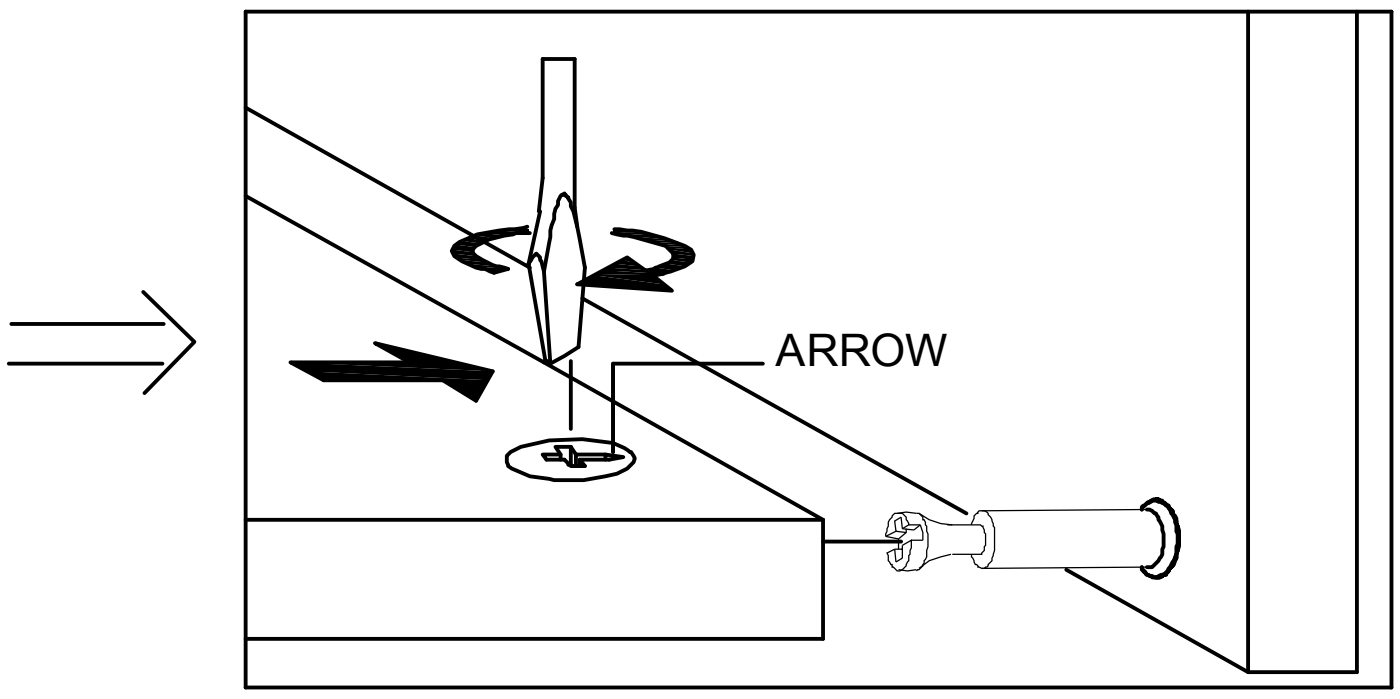
HOW TO USE THE CAM-TOOL






NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

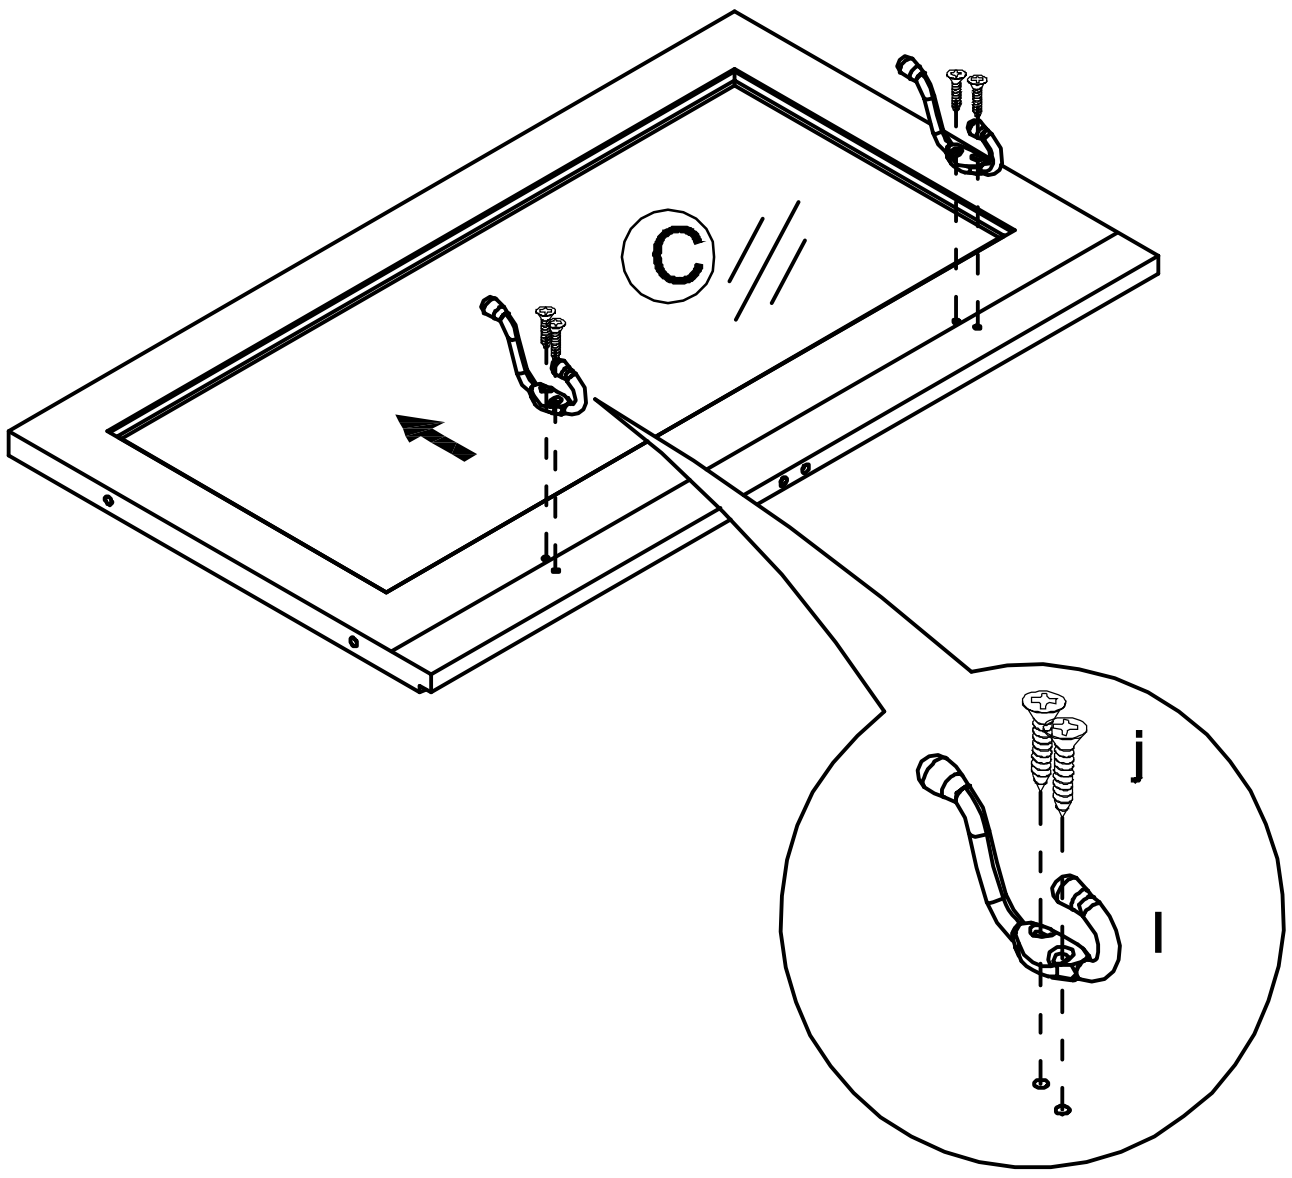FIG 1




● ATTACH THE DOUBLE HOOK (l) TO THE TOP MIRROR FRAME (C) BY USING THE 1/2" L FLAT HEAD SCREW (j).

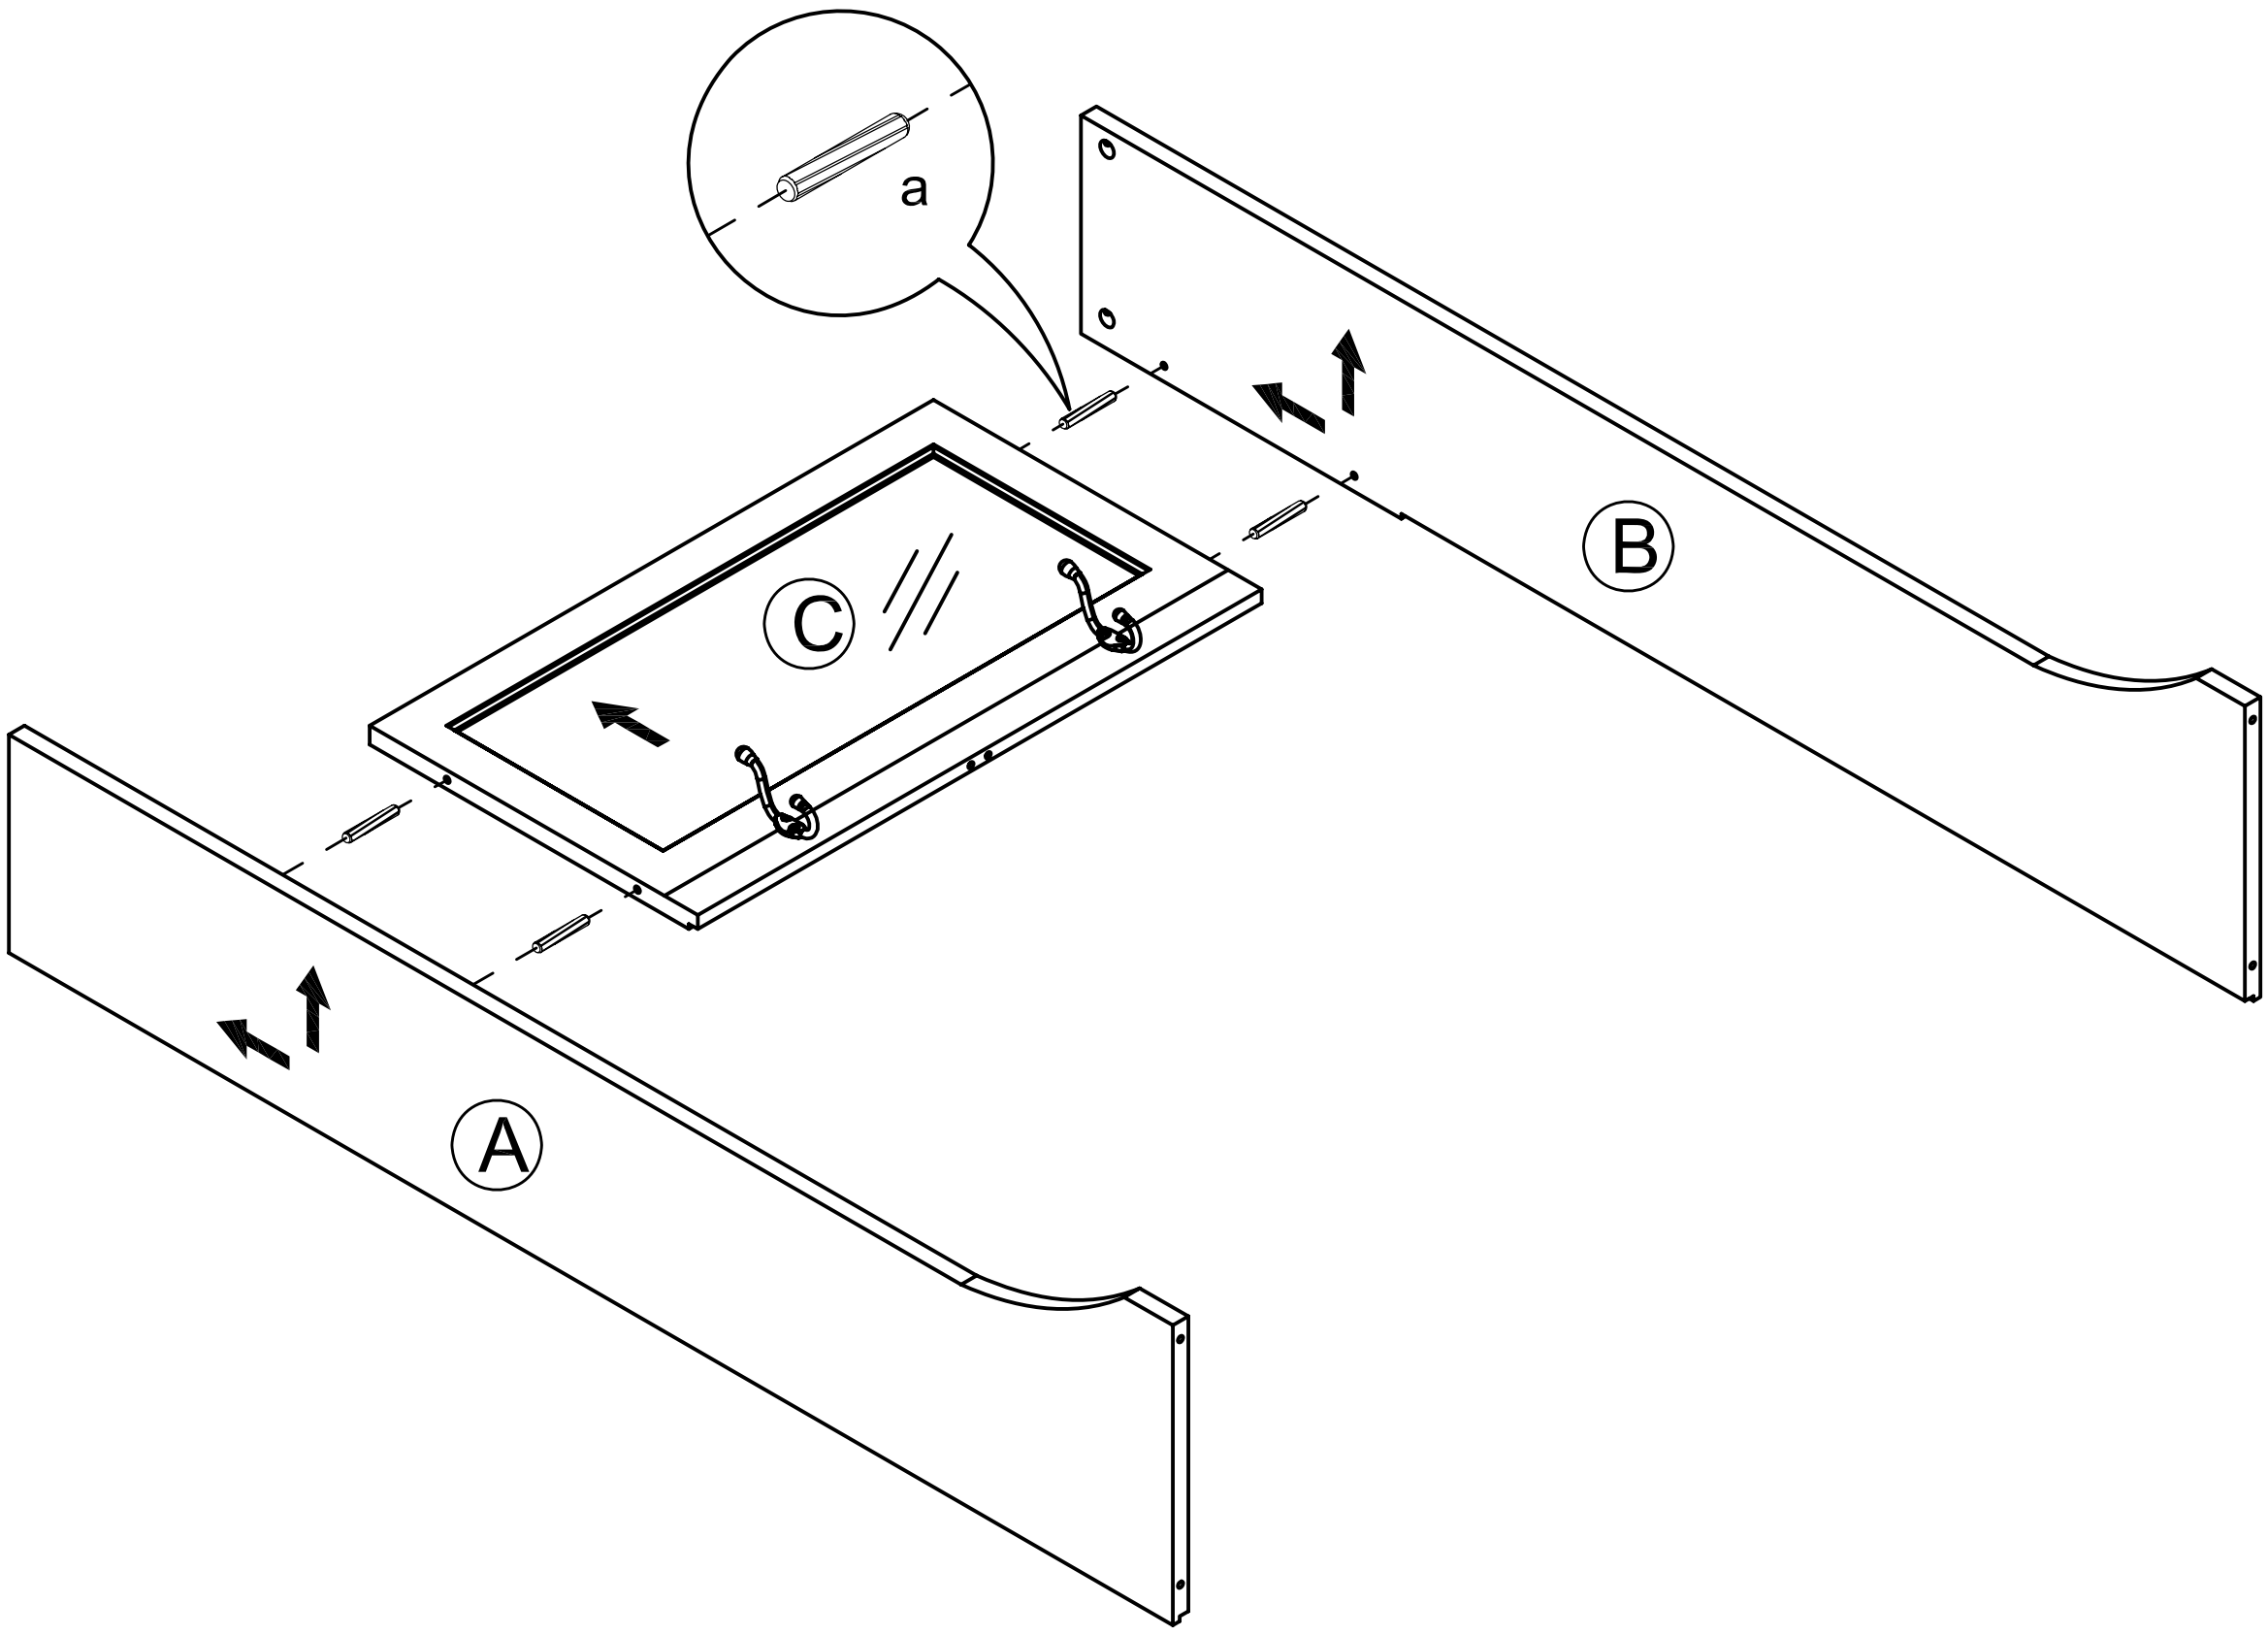FIG 2




- INTALL THE WOOD DOWEL (a) INTO THE UPPER LEFT SIDE PANEL (A) AND THE UPPER RIGHT SIDE PANEL (B).
- JOIN THE TOP MIRROR FRAME (C) TO THE UPPER LEFT SIDE PANEL (A) AND THE UPPER RIGHT SIDE PANEL (B).

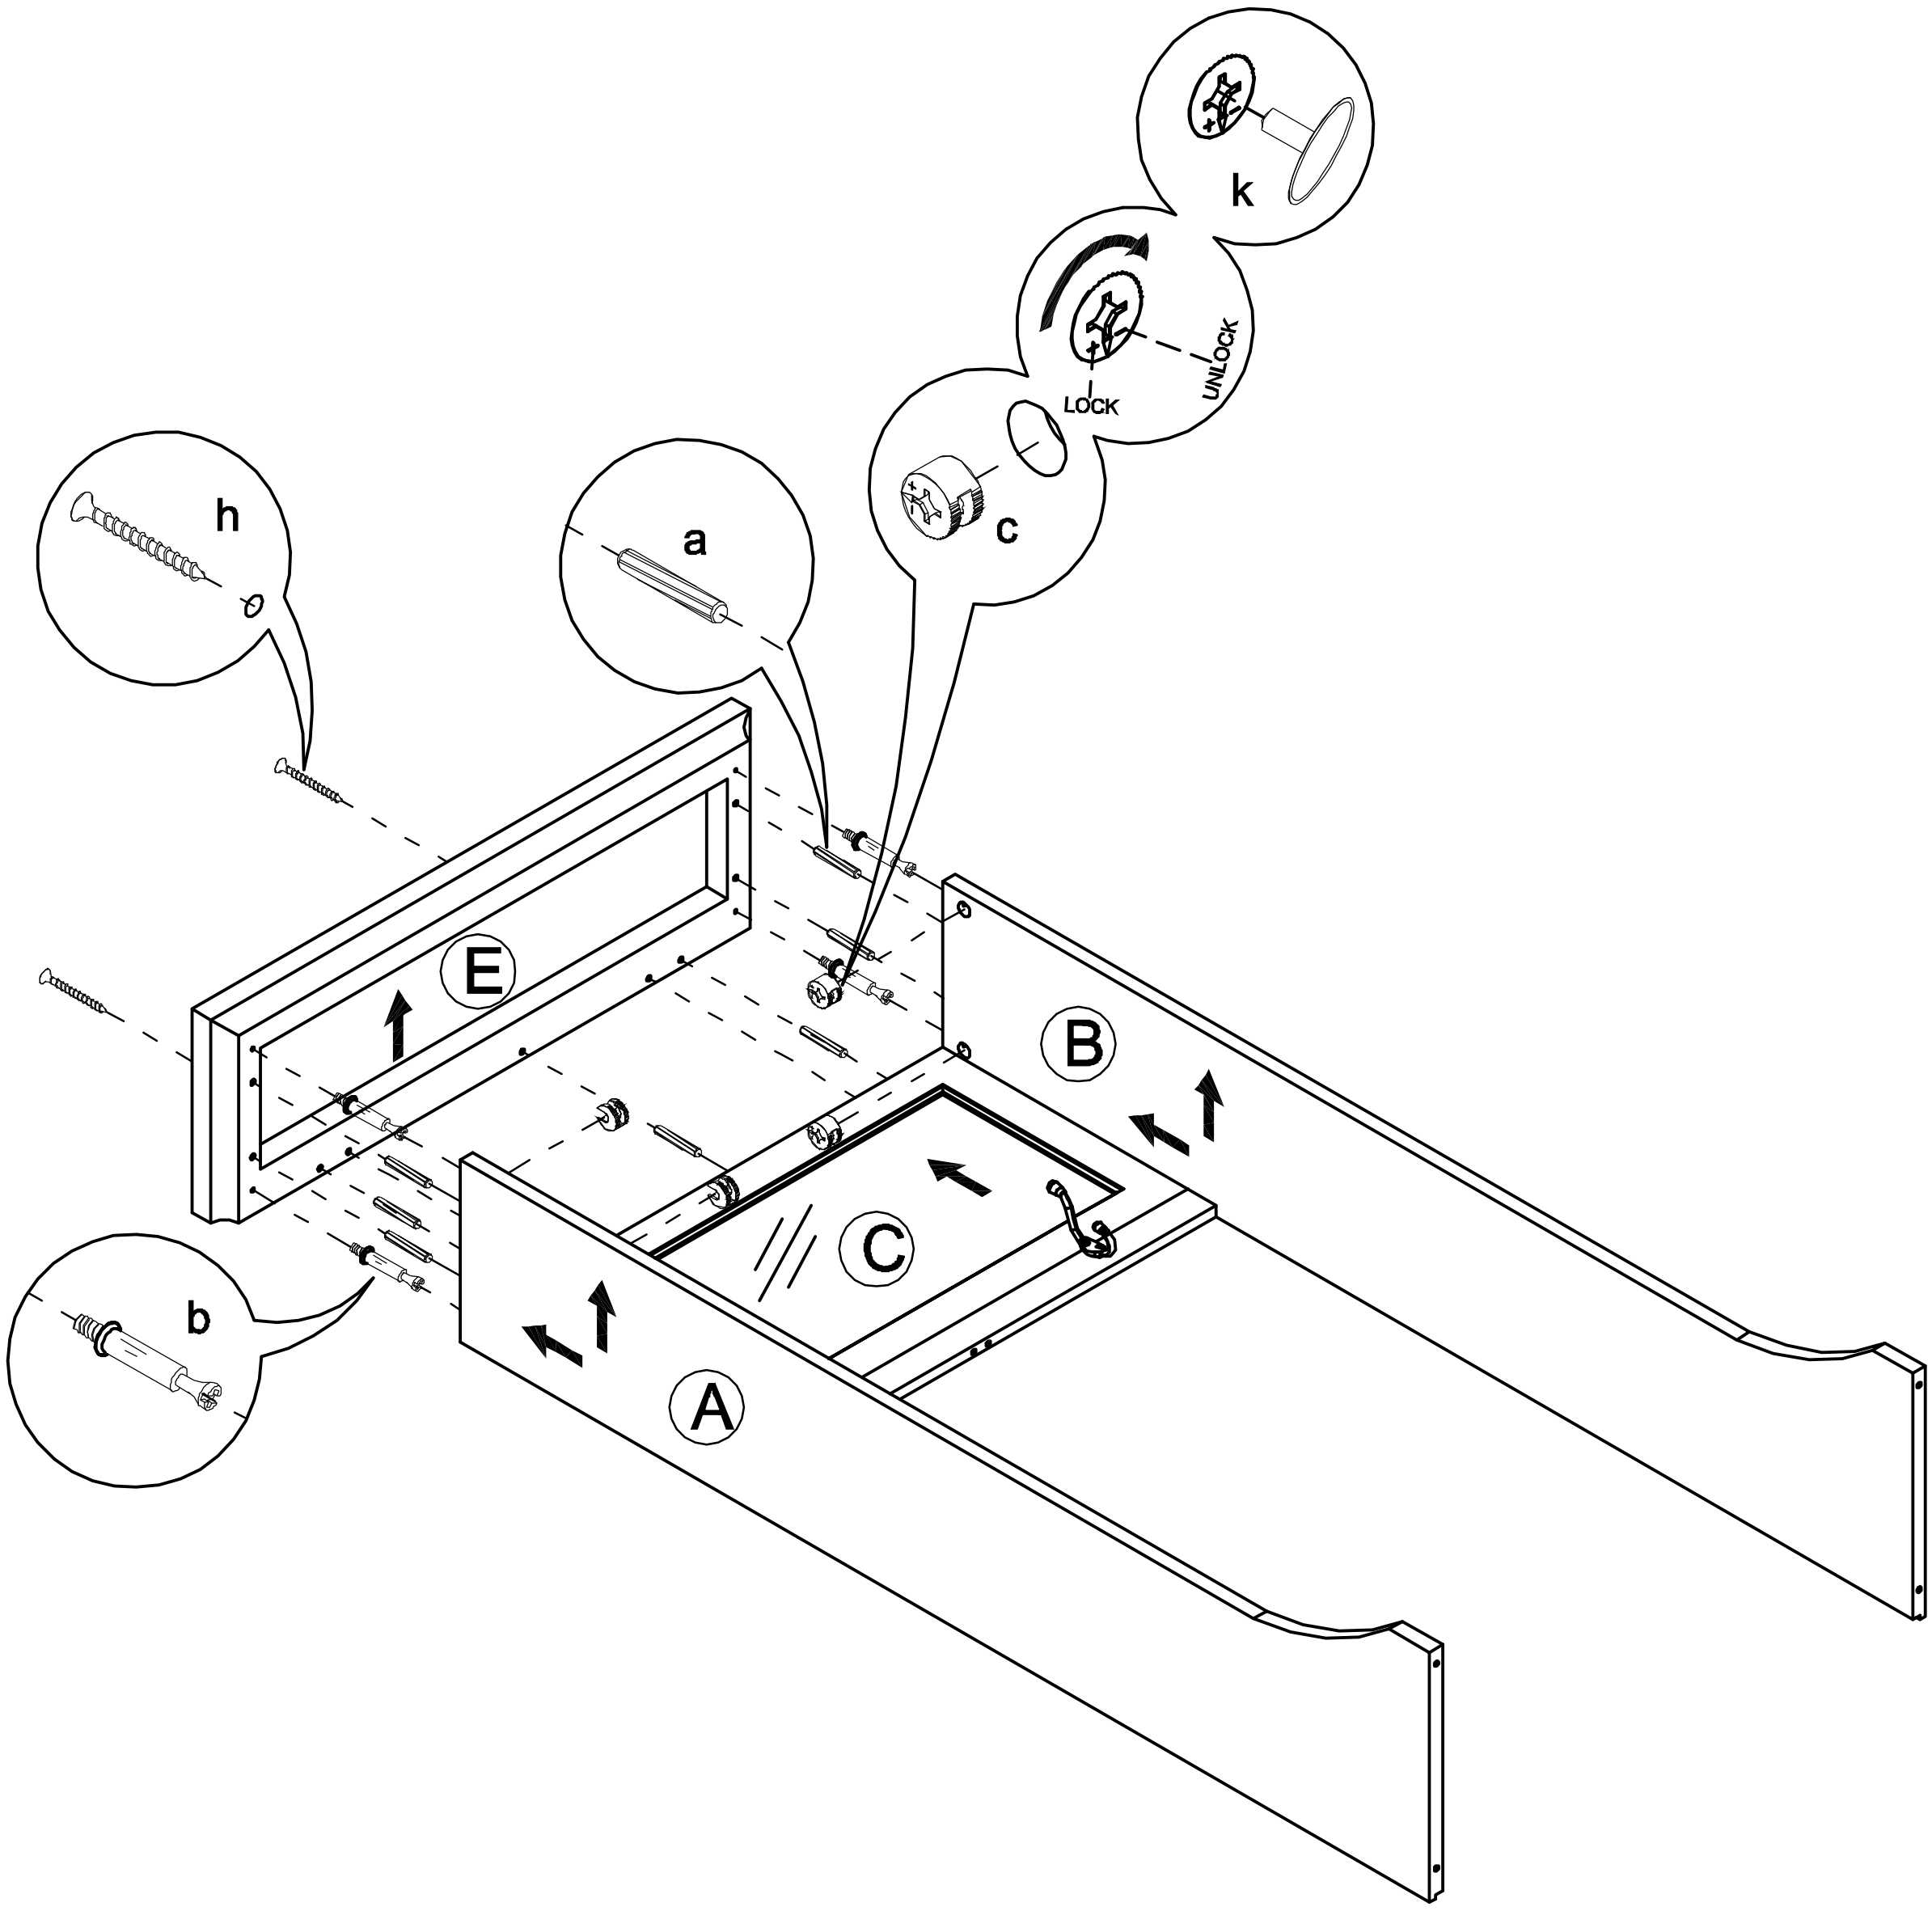FIG 3




- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (E).
- JOIN THE TOP PANEL (E) TO THE ASSEMBLED PART BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE LONG PLASTIC COVER (k).
- TIGHTEN THE TOP PANEL (E) AND THE TOP MIRROR FRAME (C) BY USING THE 1-1/2”L FLAT HEAD SCREWS (h).

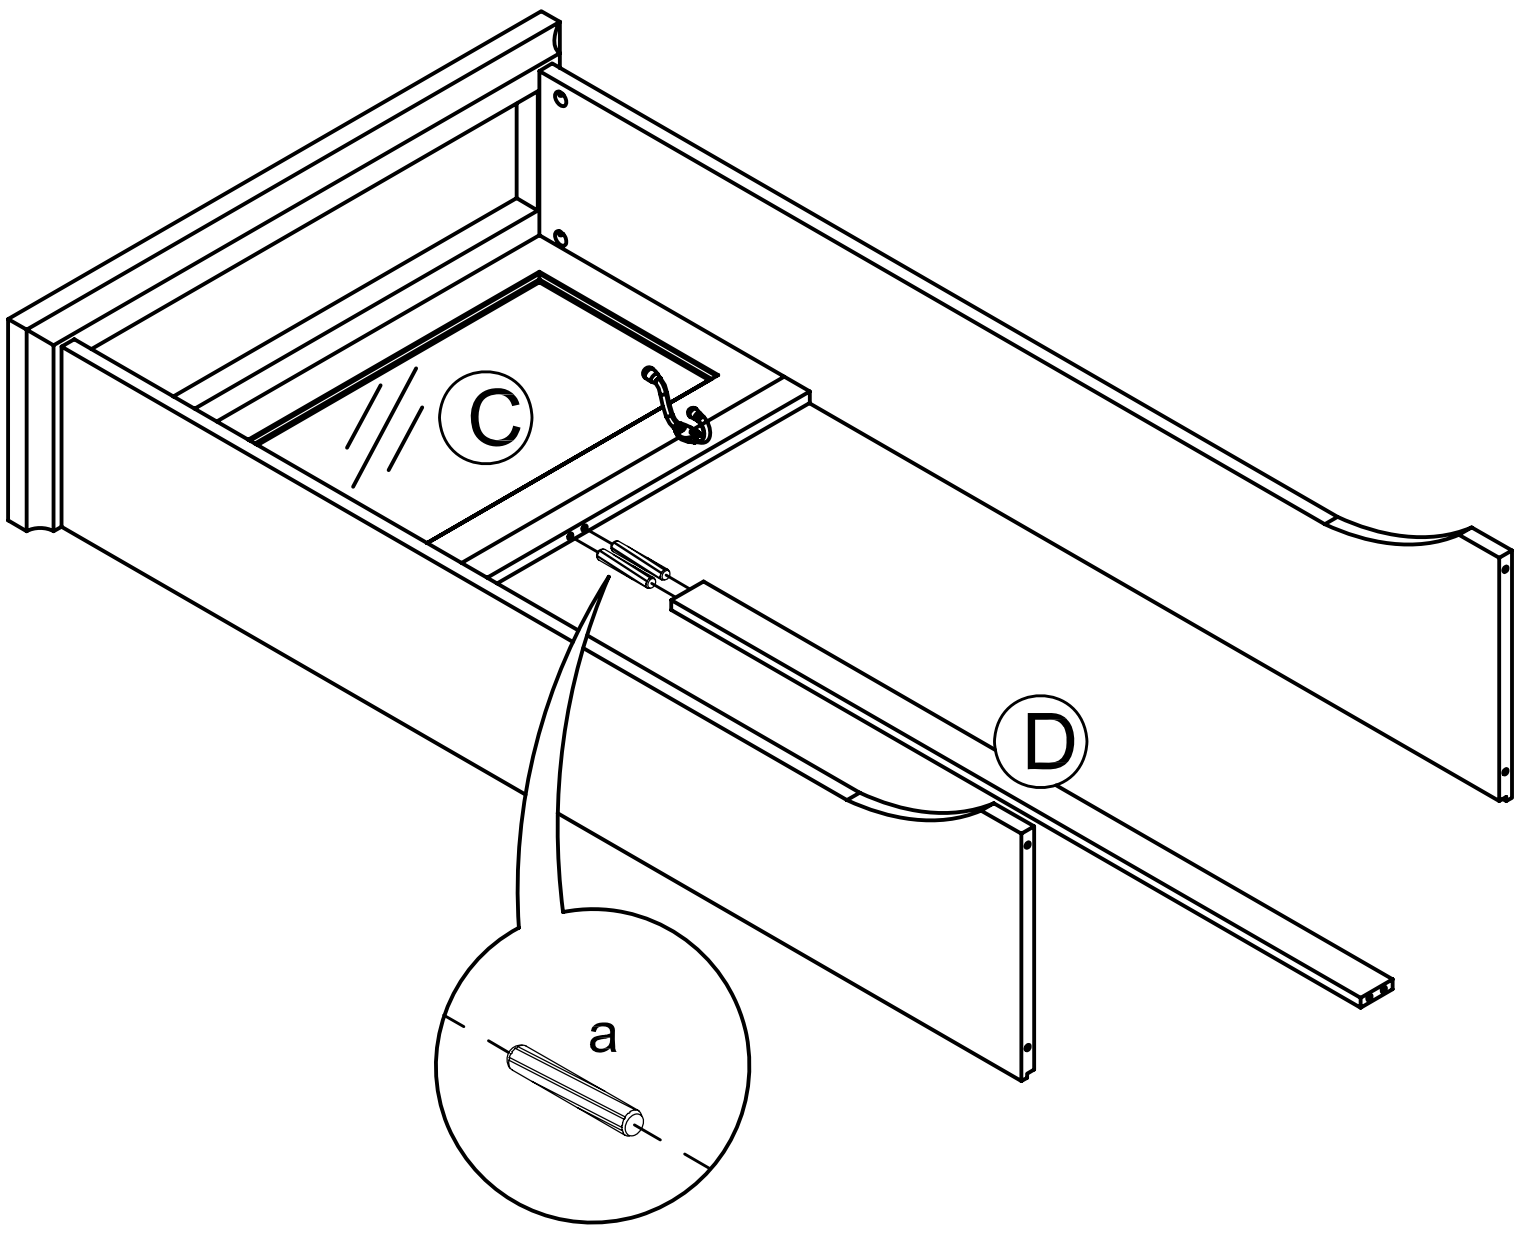FIG 4




- INSTALL THE WOOD DOWEL (a) INTO THE BACK SUPPORT SLAT (D).
- JOIN THE BACK SUPPORT SLAT (D) TO THE ASSMEBLED PART.

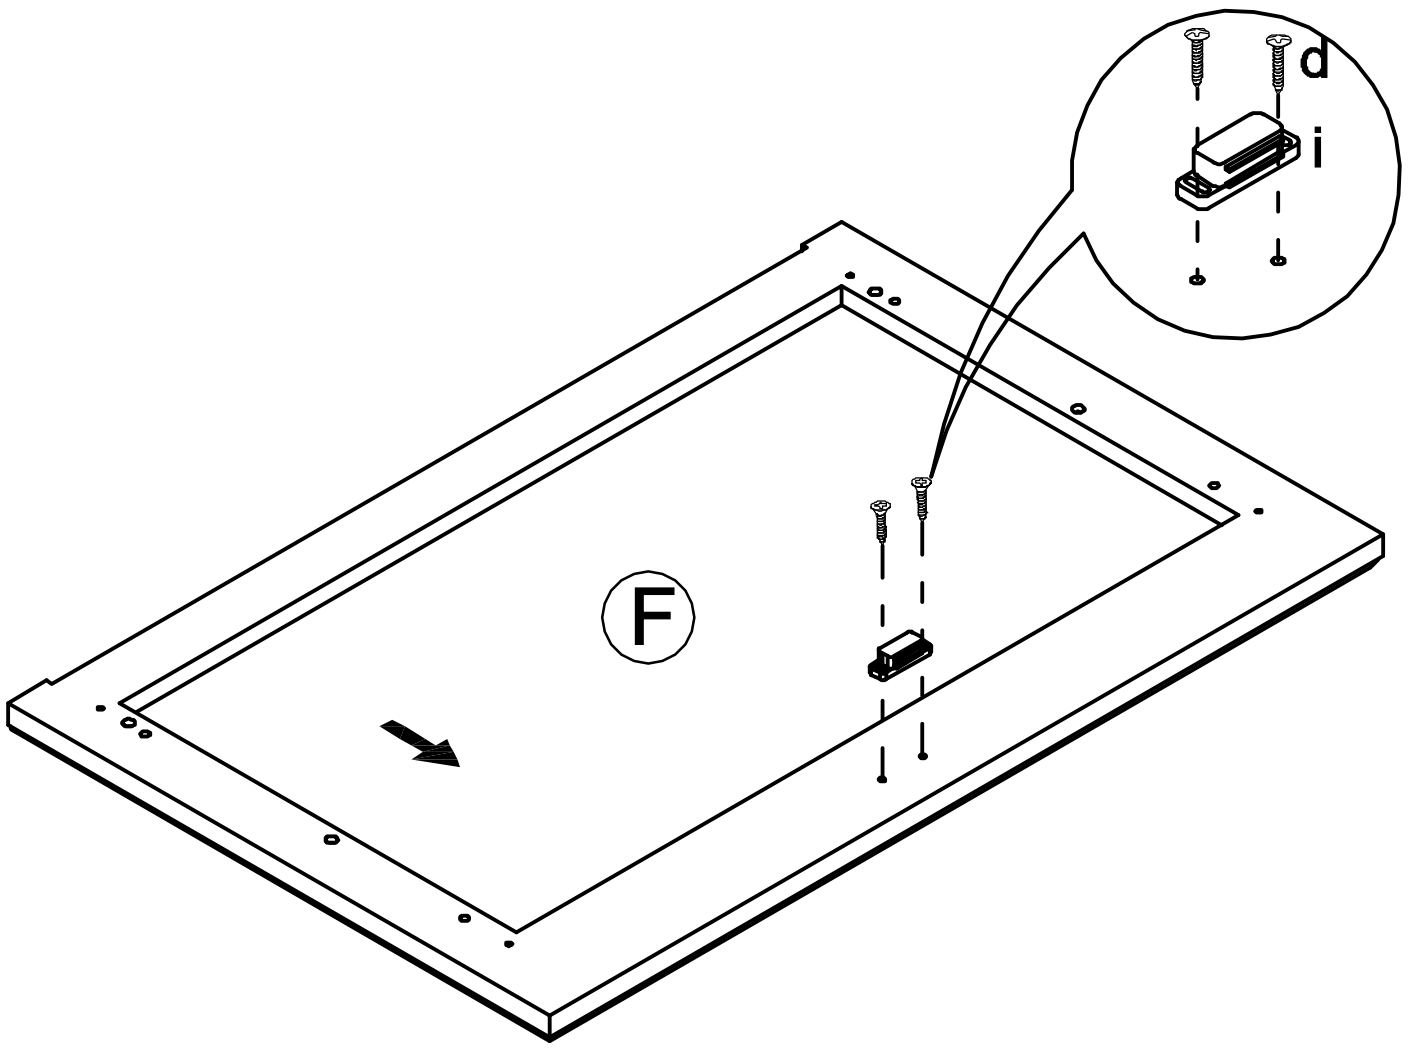FIG 5




● ATTACH THE MAGNET (i) INTO BOTTOM OF THE FIXED PANEL (F) BY USING THE 5/8” L ROUND HEAD SCREW (d).

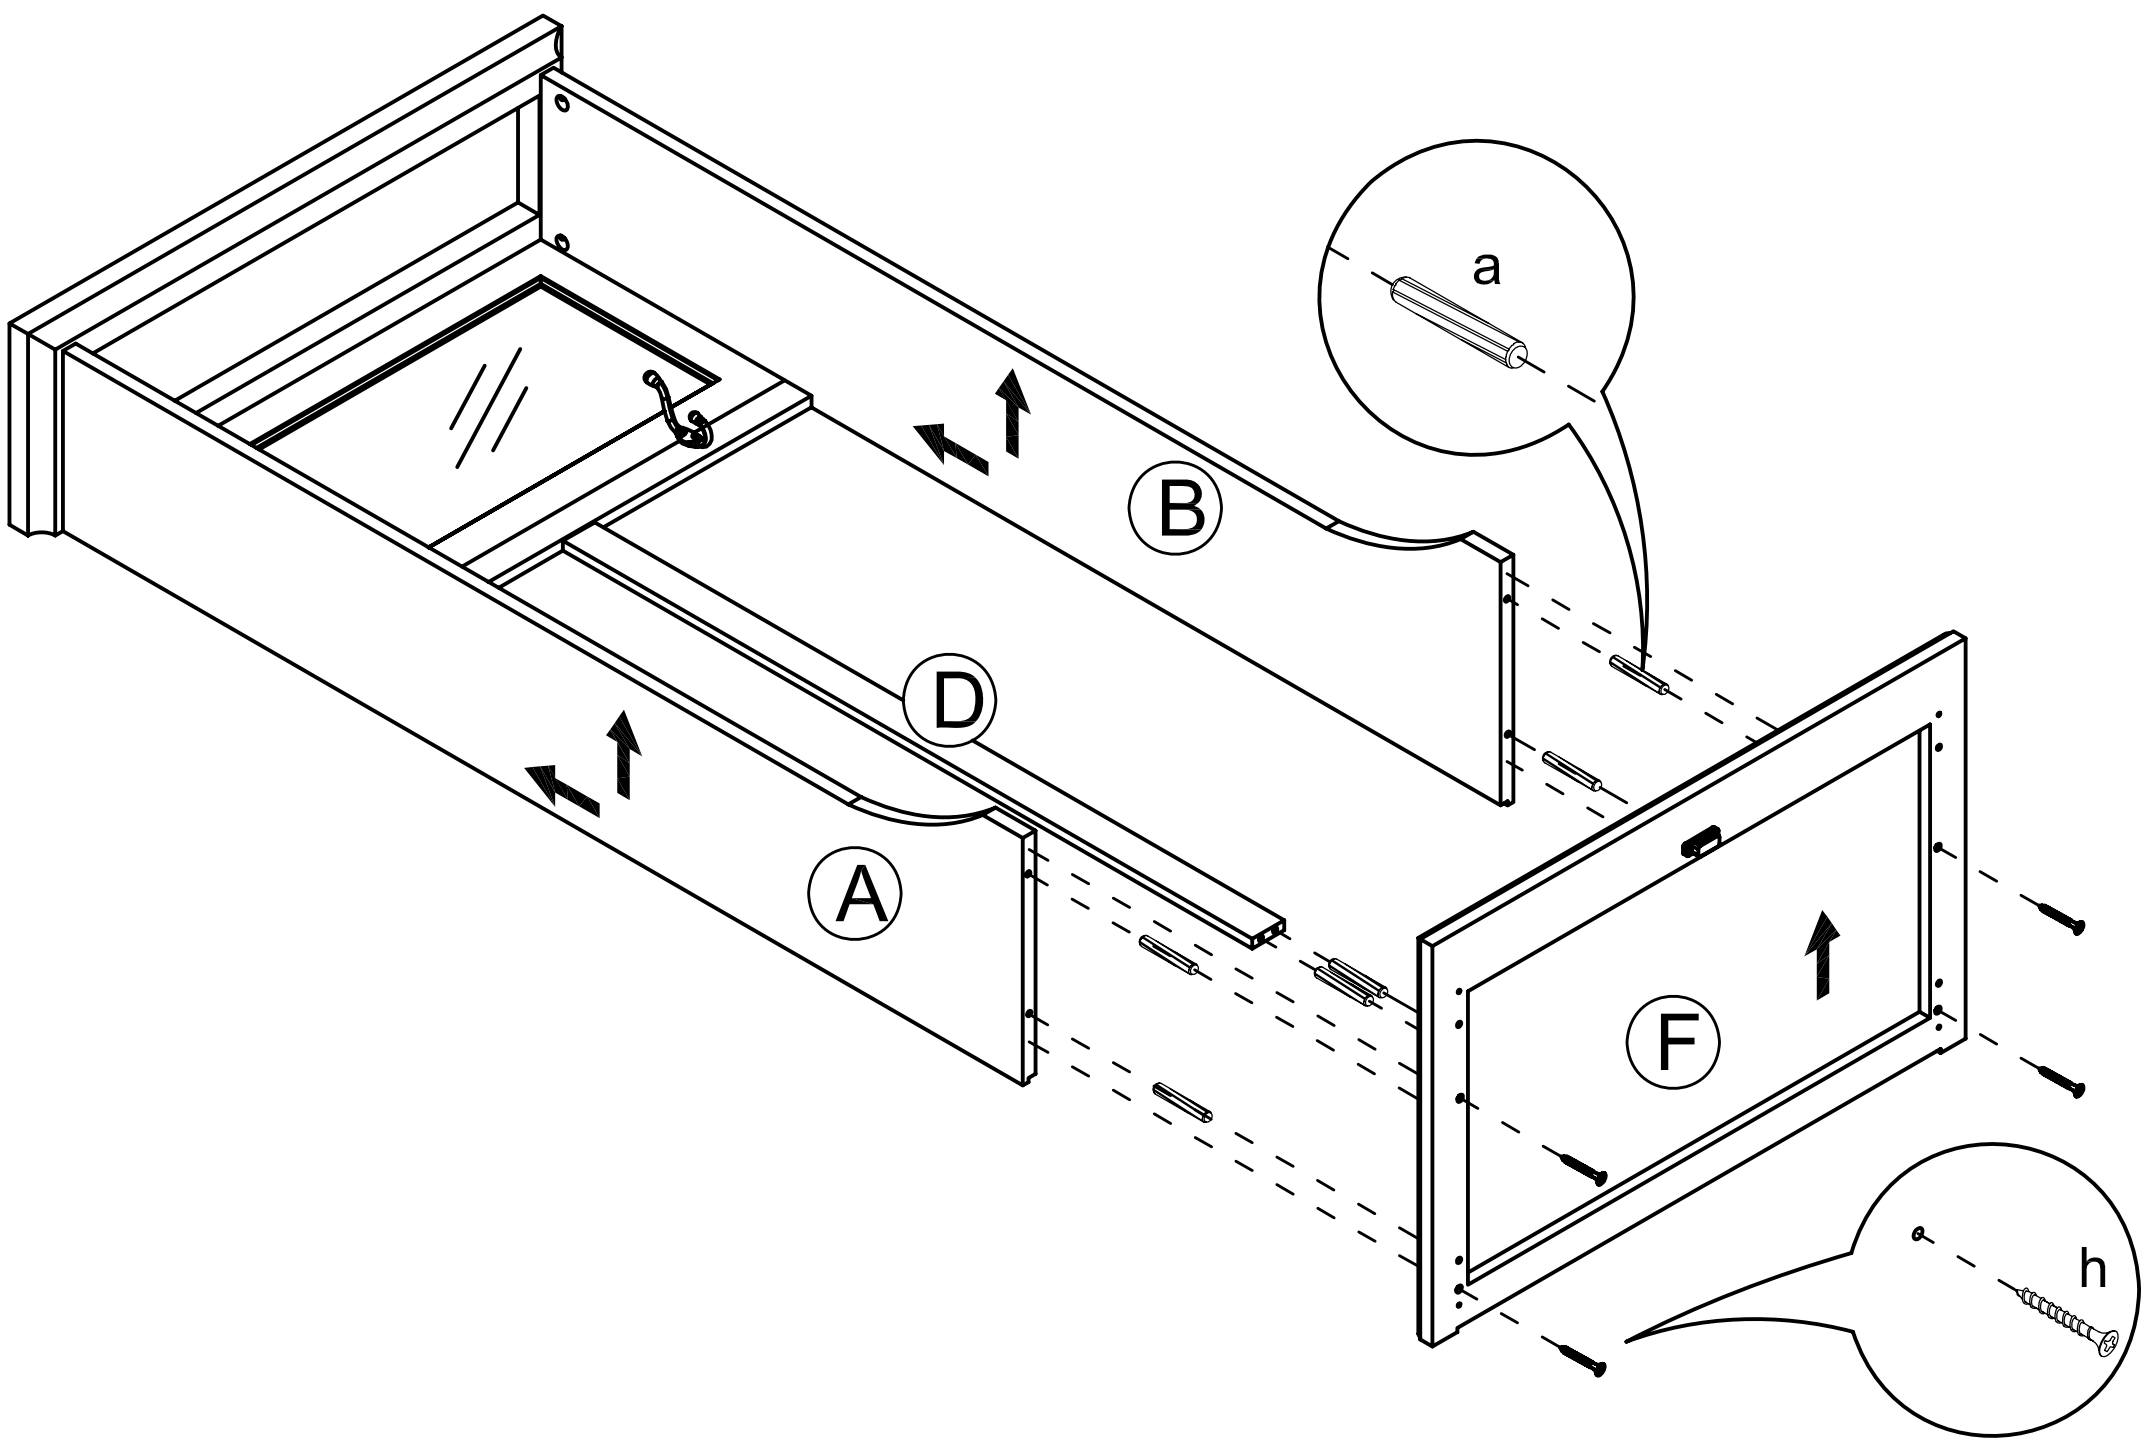FIG 6




- INSTALL THE WOOD DOWEL (a) INTO TOP OF THE FIXED PANEL (F).
- JOIN THE FIXED PANEL (F) TO THE ASSEMBLED PART BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE FIXED PANEL (F) TO THE ASSEMBLED PART BY USING THE 1-1/2”L FLAT HEAD SCREW (h) FROM BOTTOM OF PRE-DRILLED HOLES ON THE FIXED PANEL (F).

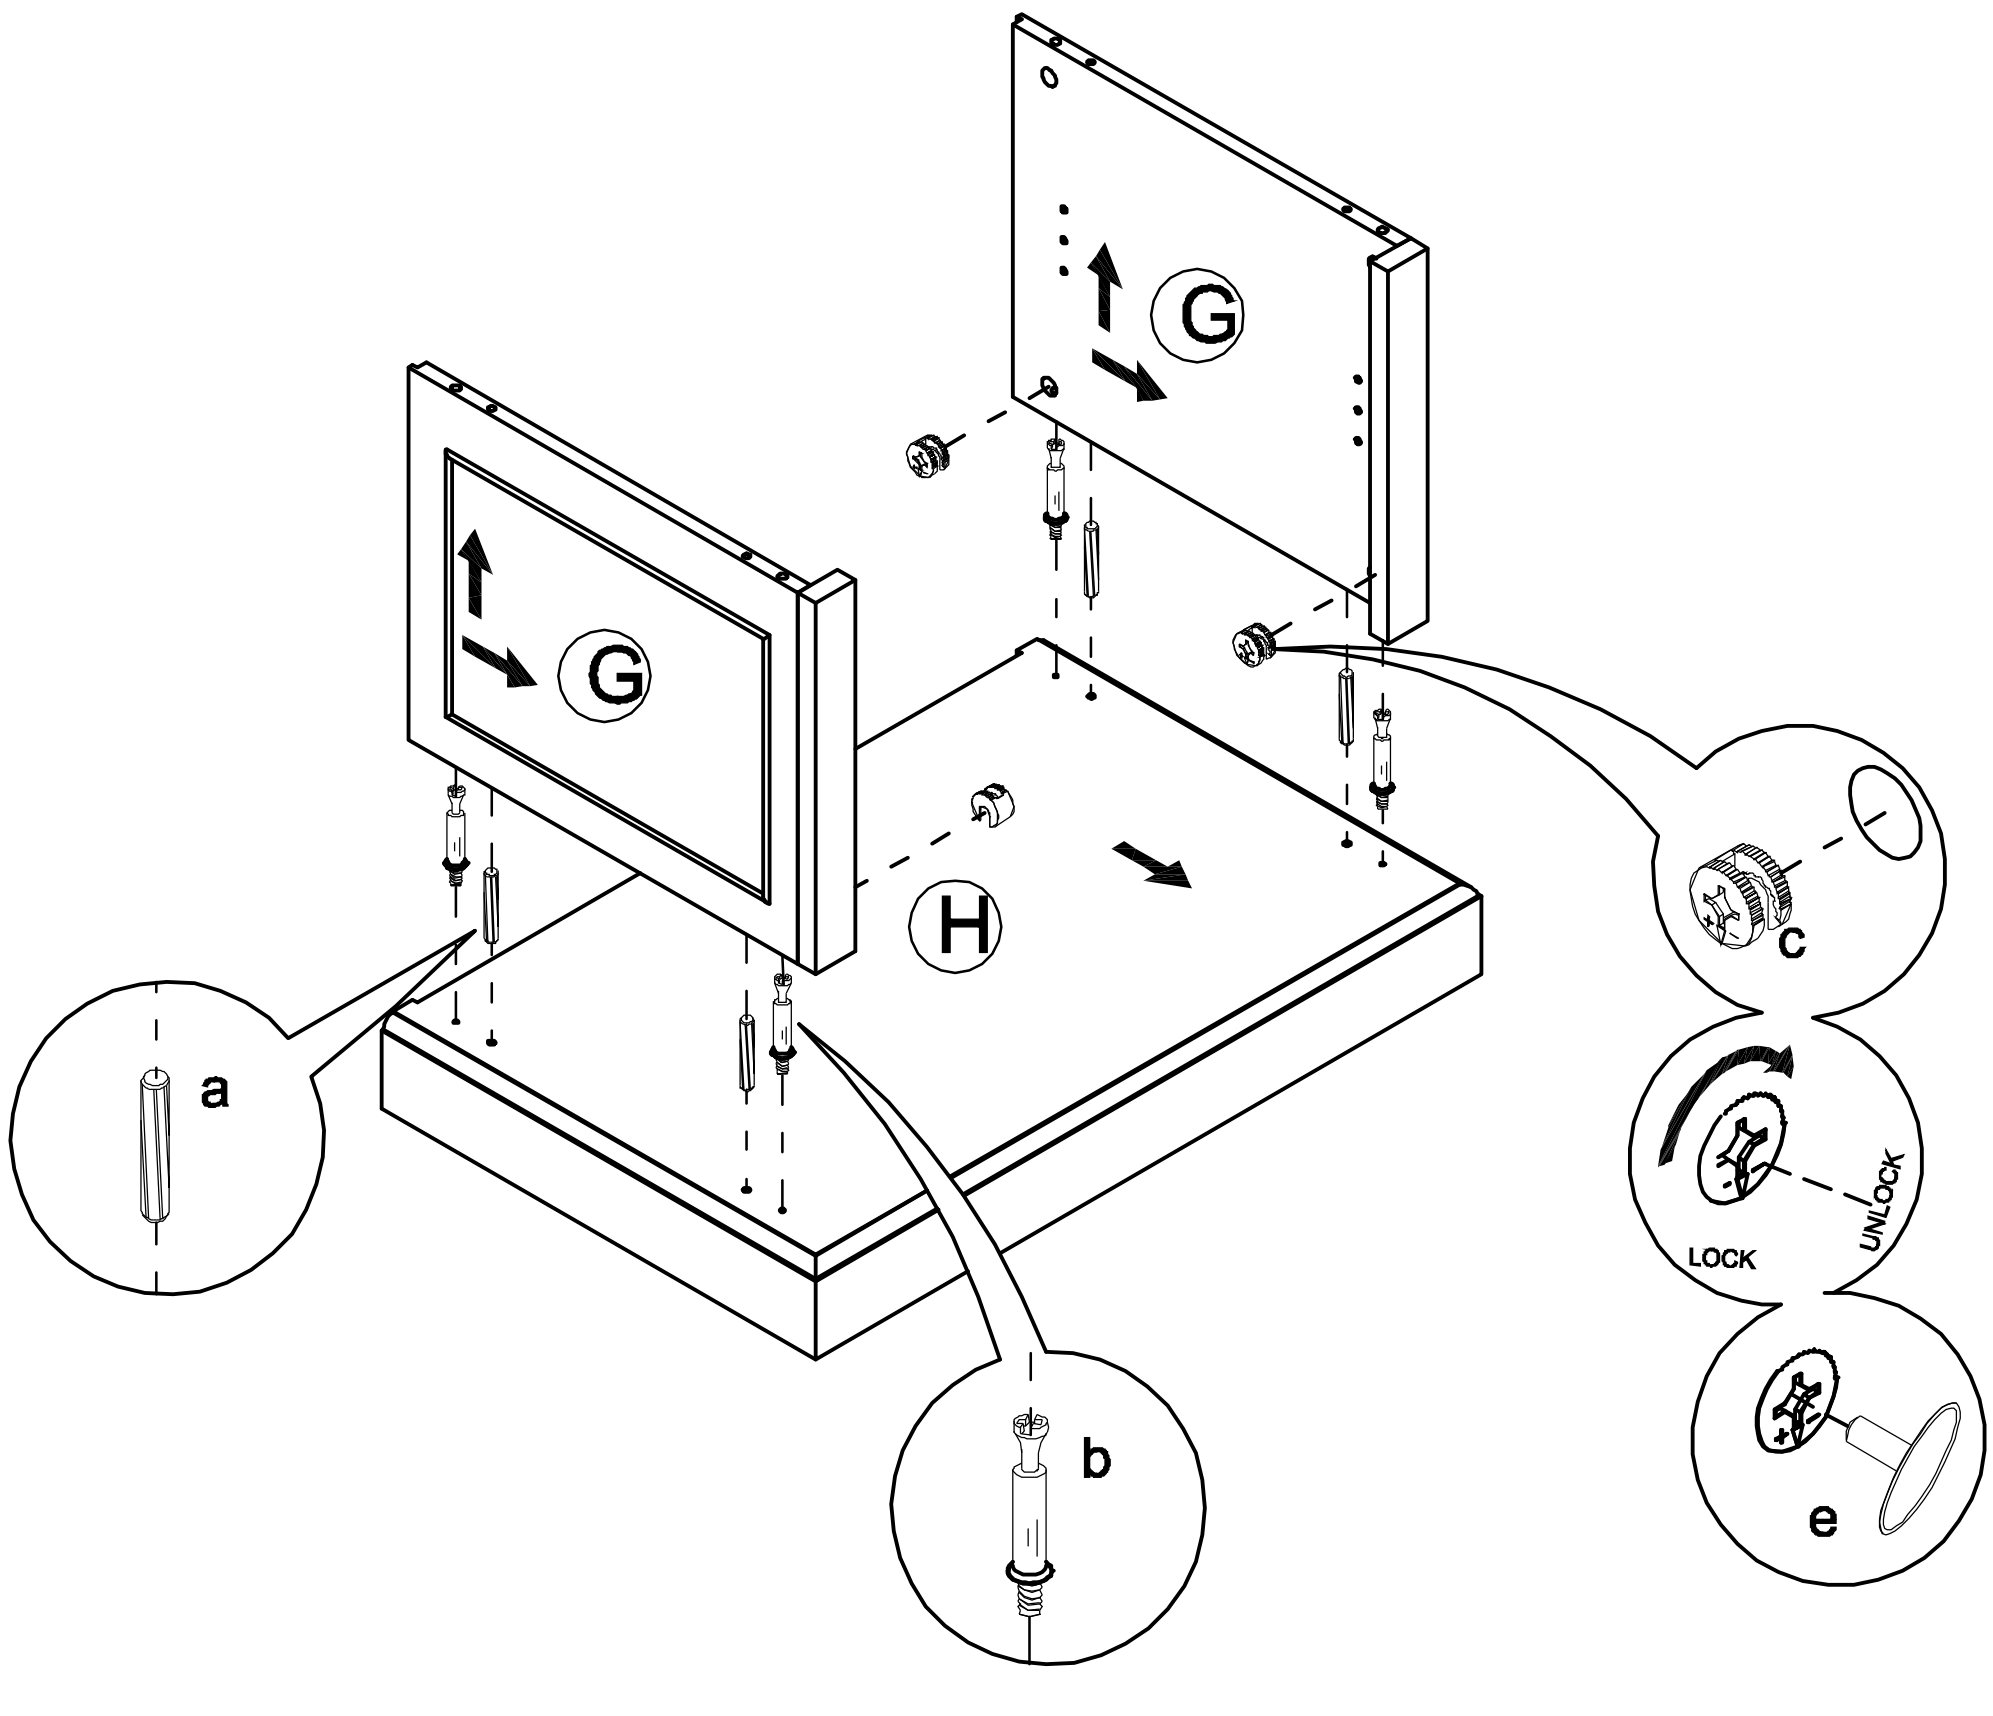FIG 7




- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (H).
- JOIN THE LOWER SIDE PANEL (G) TO THE BOTTOM PANEL (H) BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE SHORT PLASTIC COVER (e).

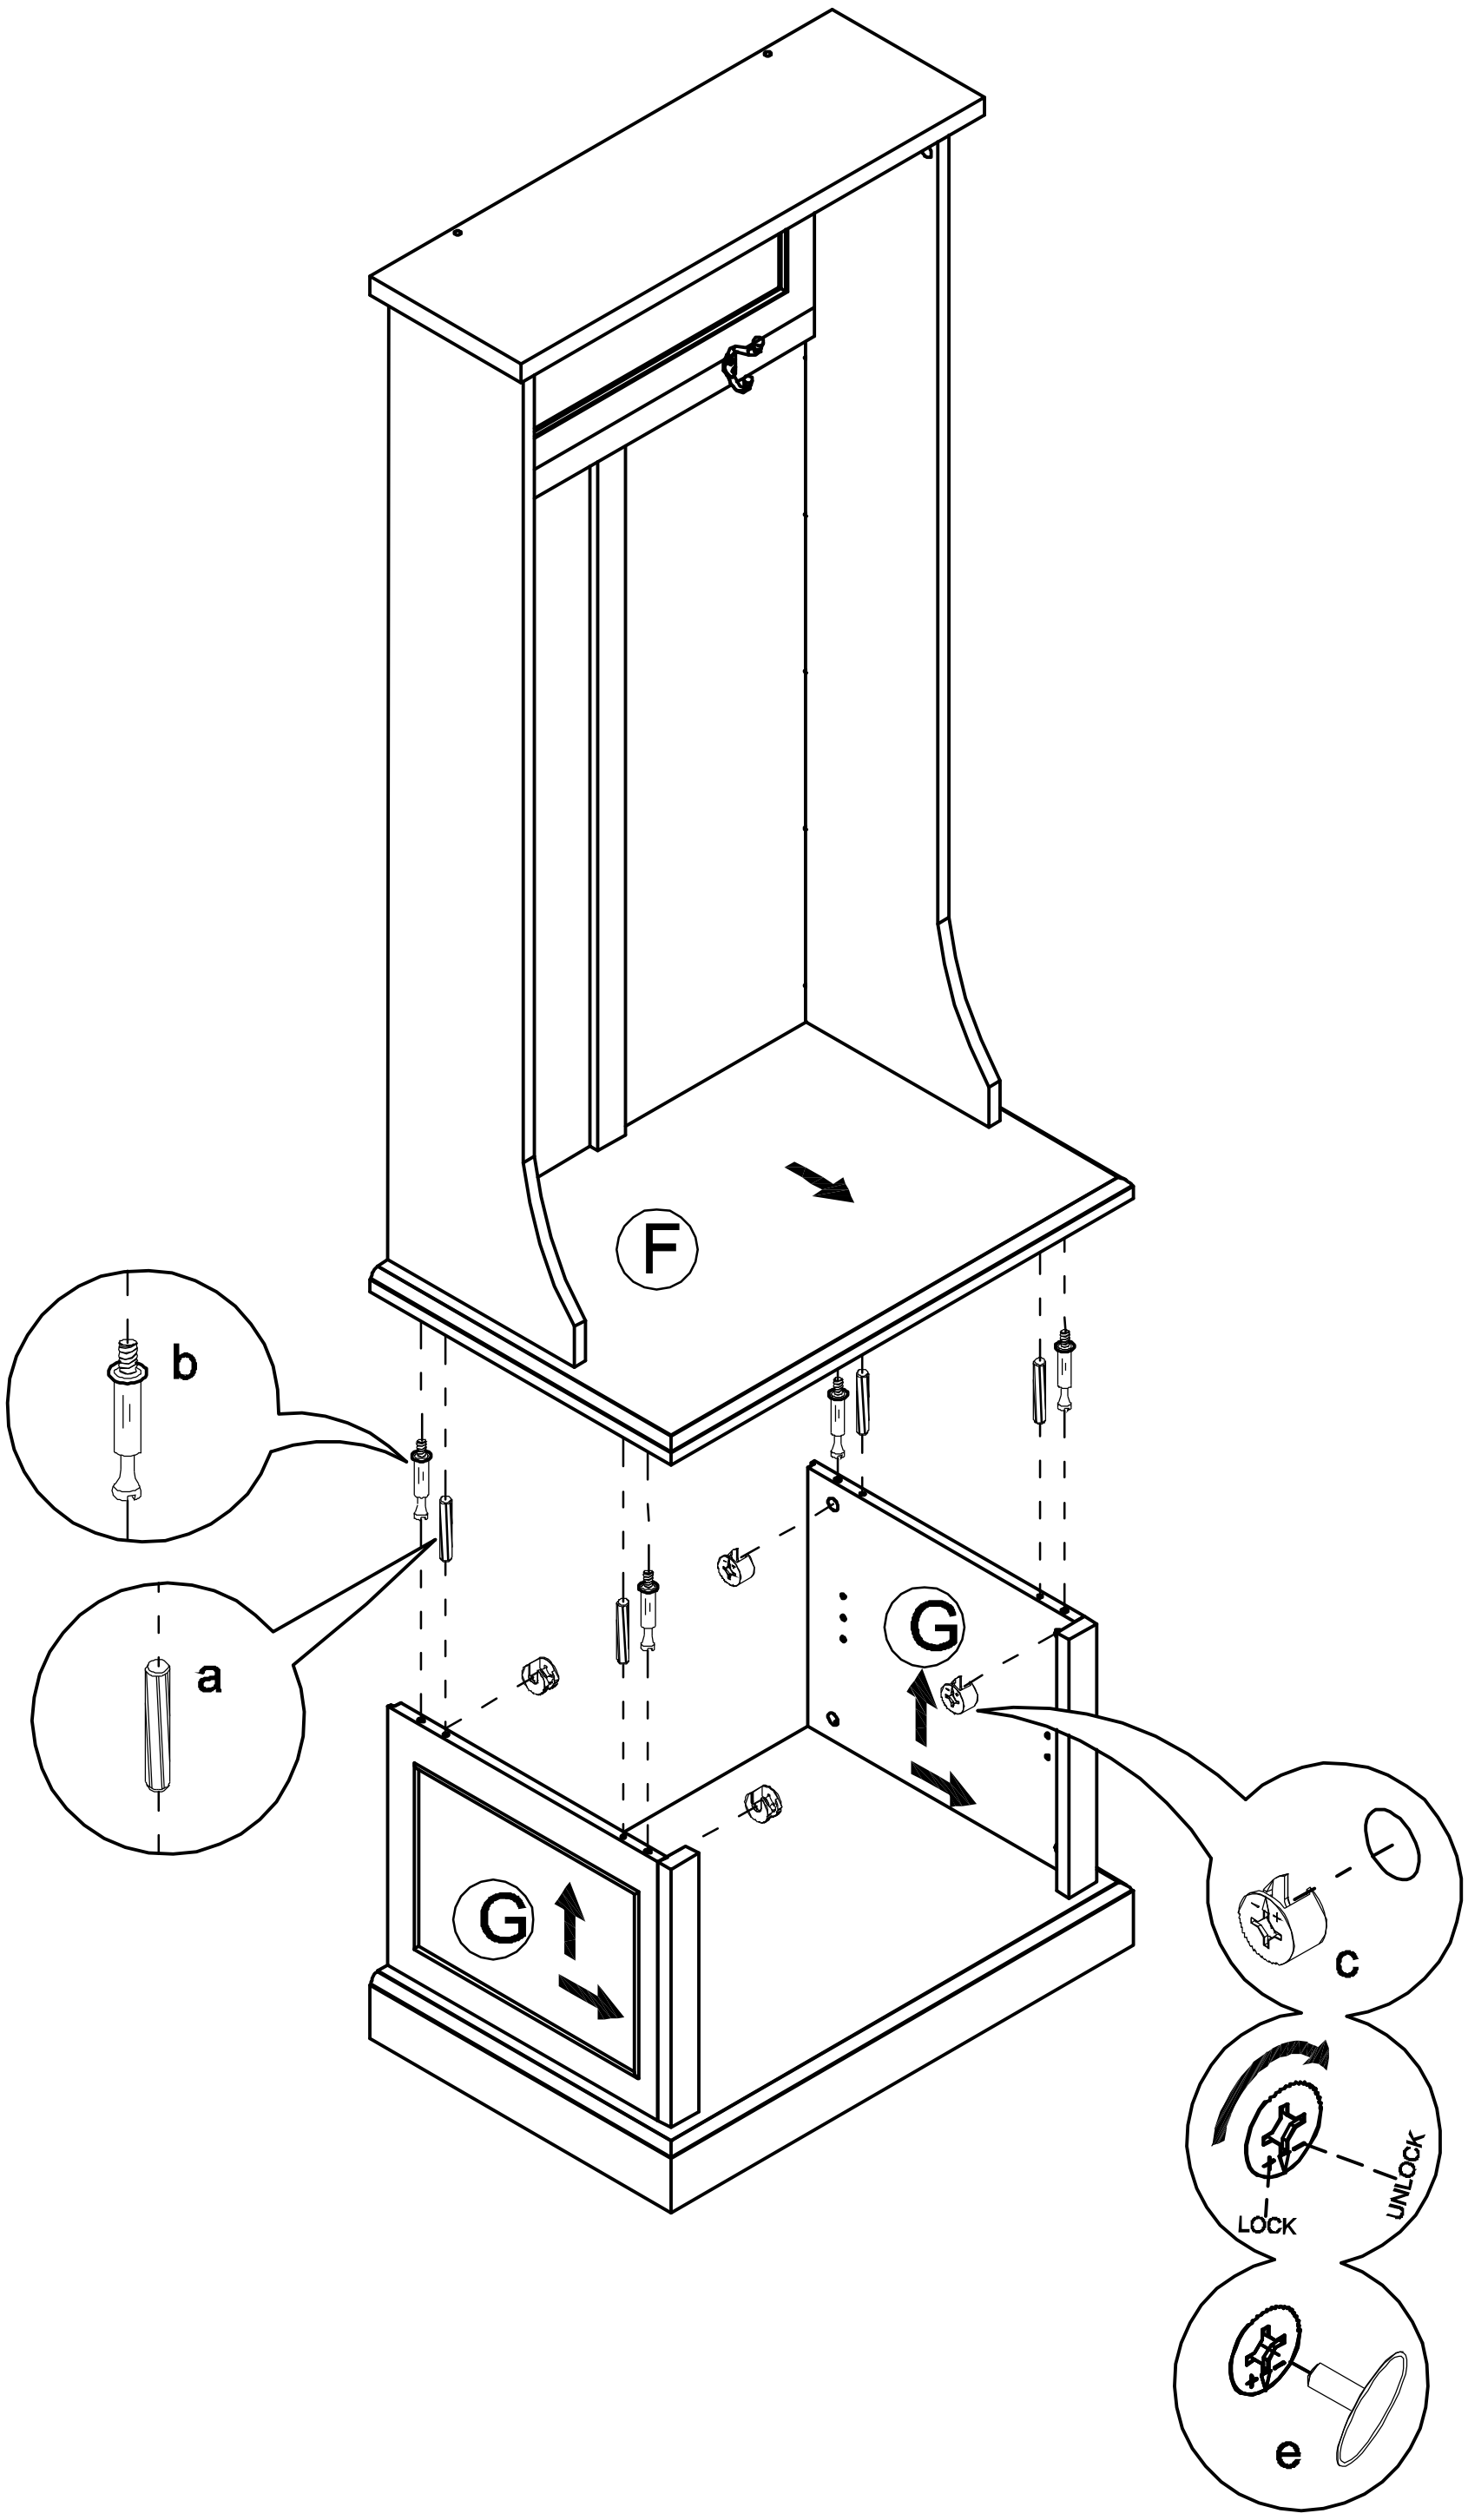FIG 8




- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO BOTTOM OF THE FIXED PANEL (F).
- JOIN TWO ASSEMBLED PARTS BY USING THE WOOD DOWEL (a) FIRST.
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE SHORT PLASTIC COVER (e).

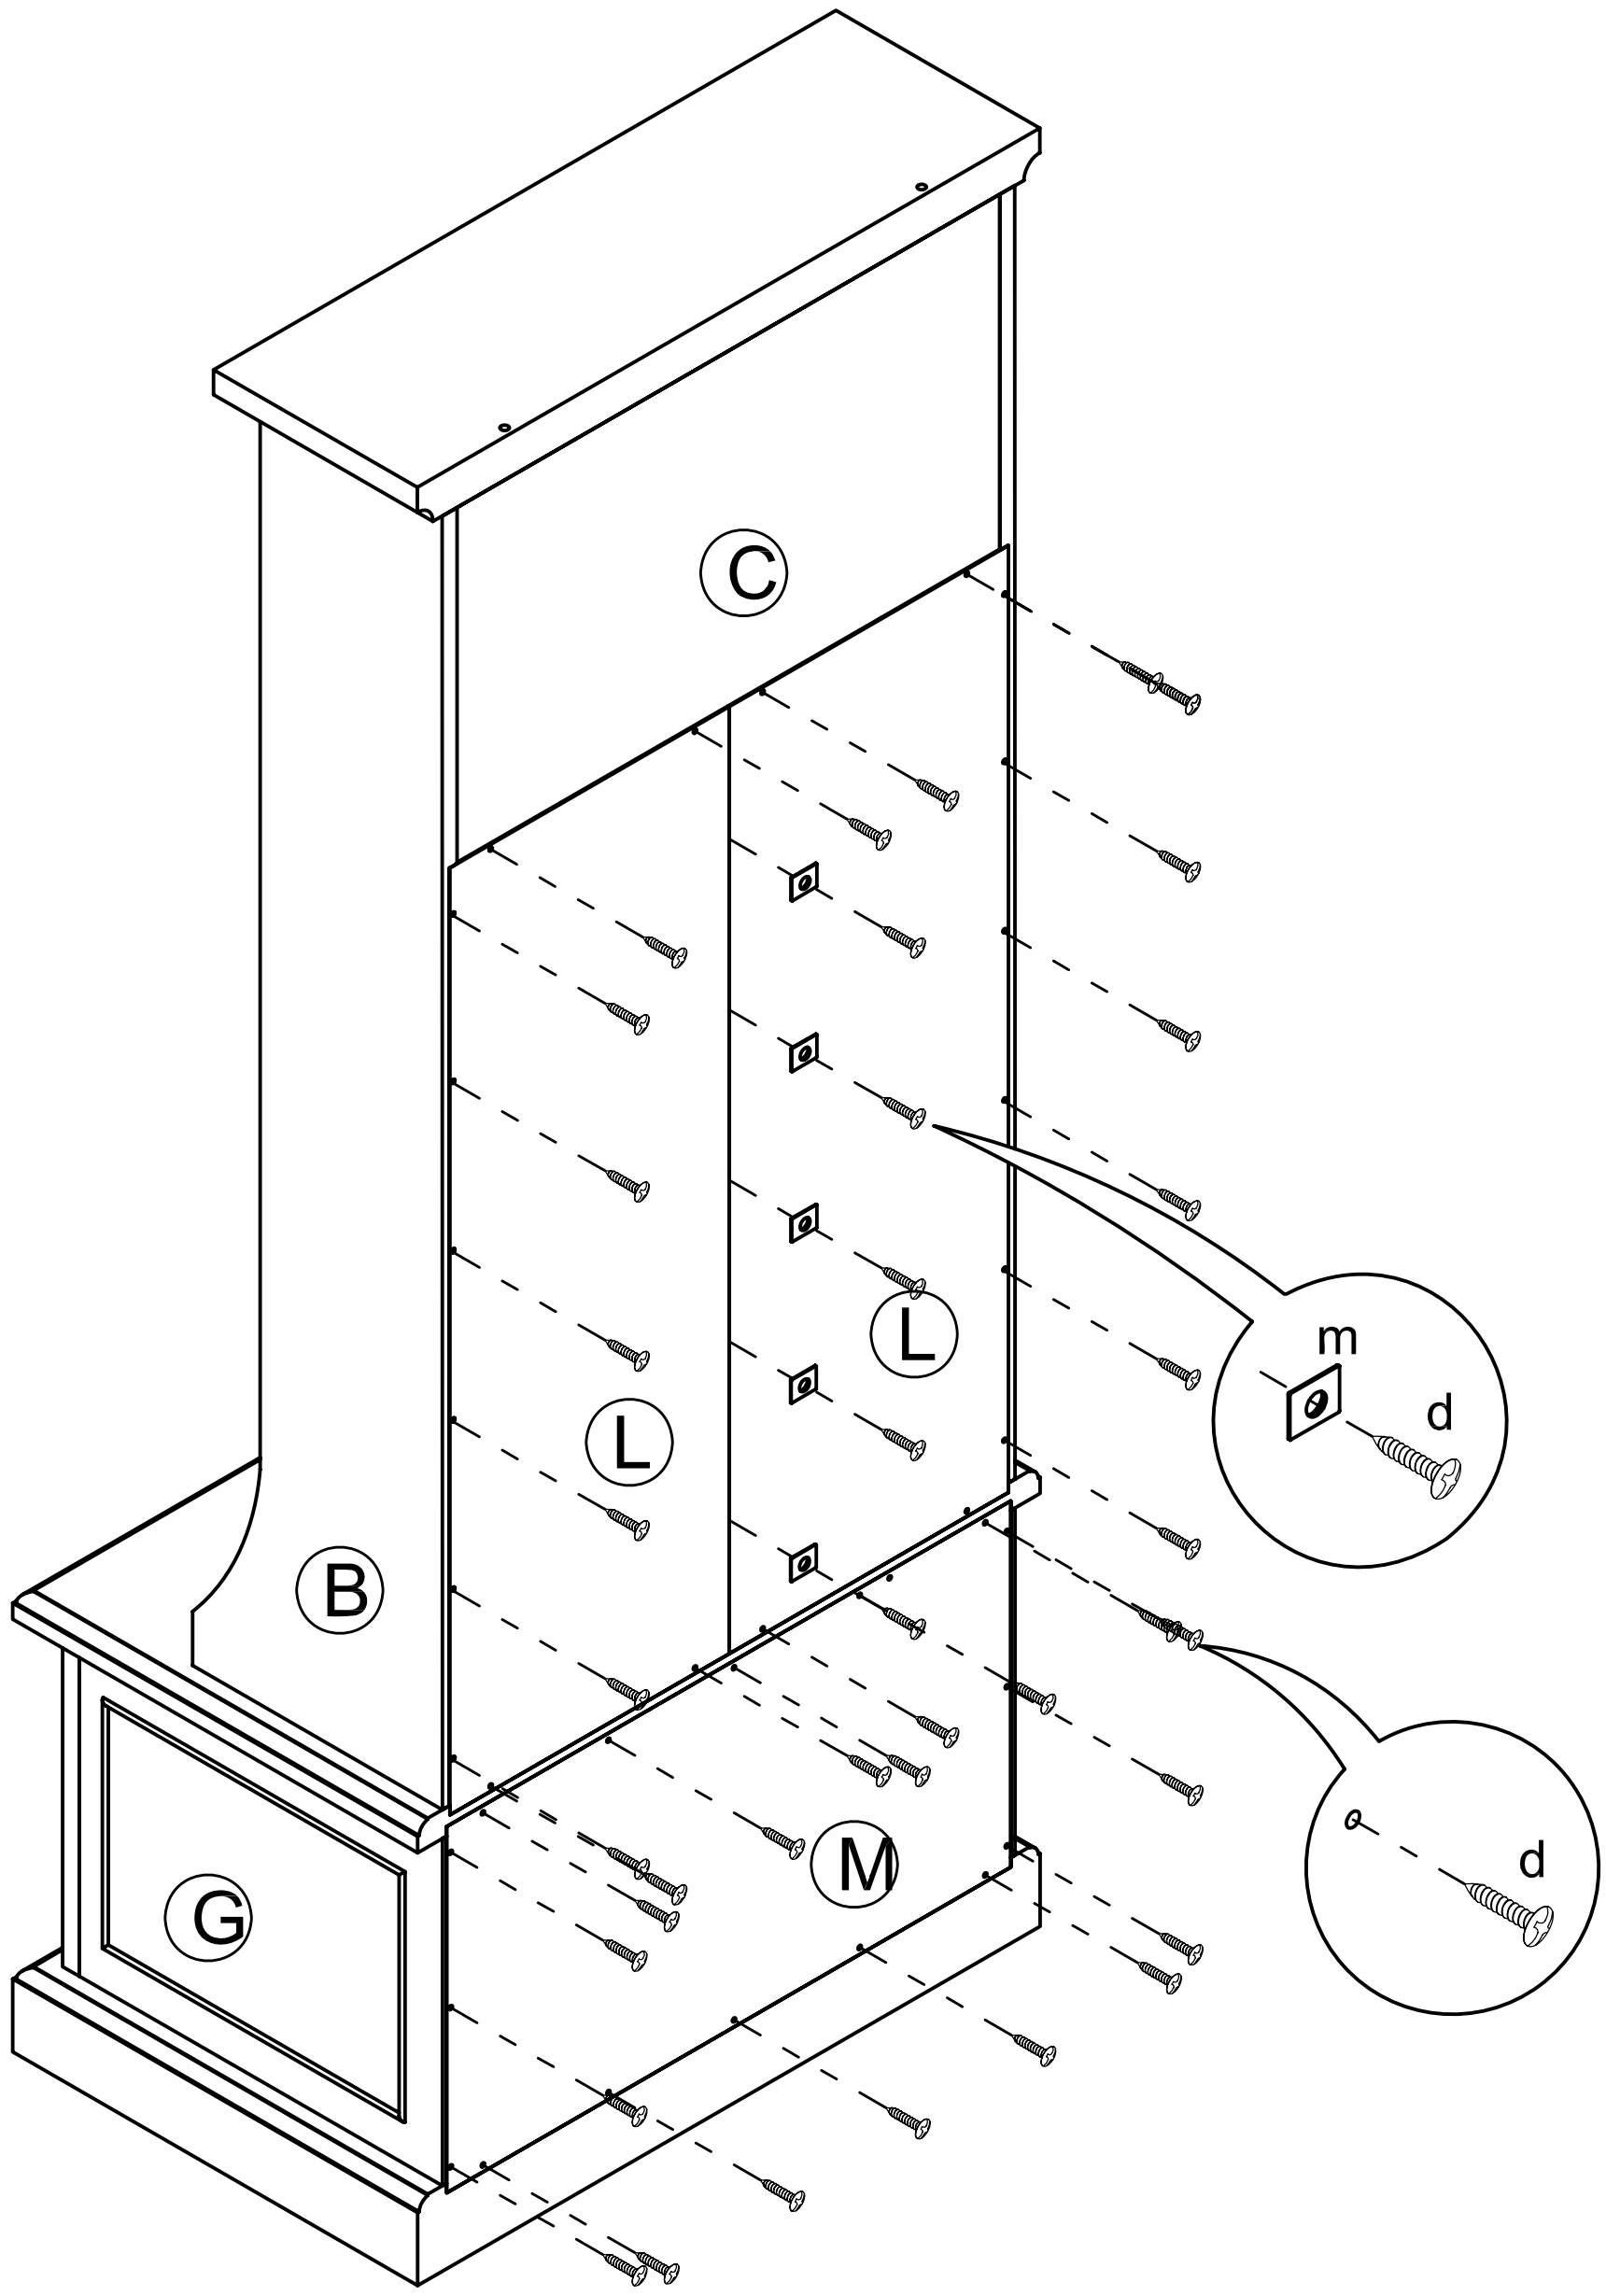FIG 9




● TIGHTEN THE UPPER BACK PANEL (L) AND THE LOWER BACK PANEL (M) BY USING THE METAL PLATE (m) AND THE 5/8” L ROUND HEAD SCREW (d).

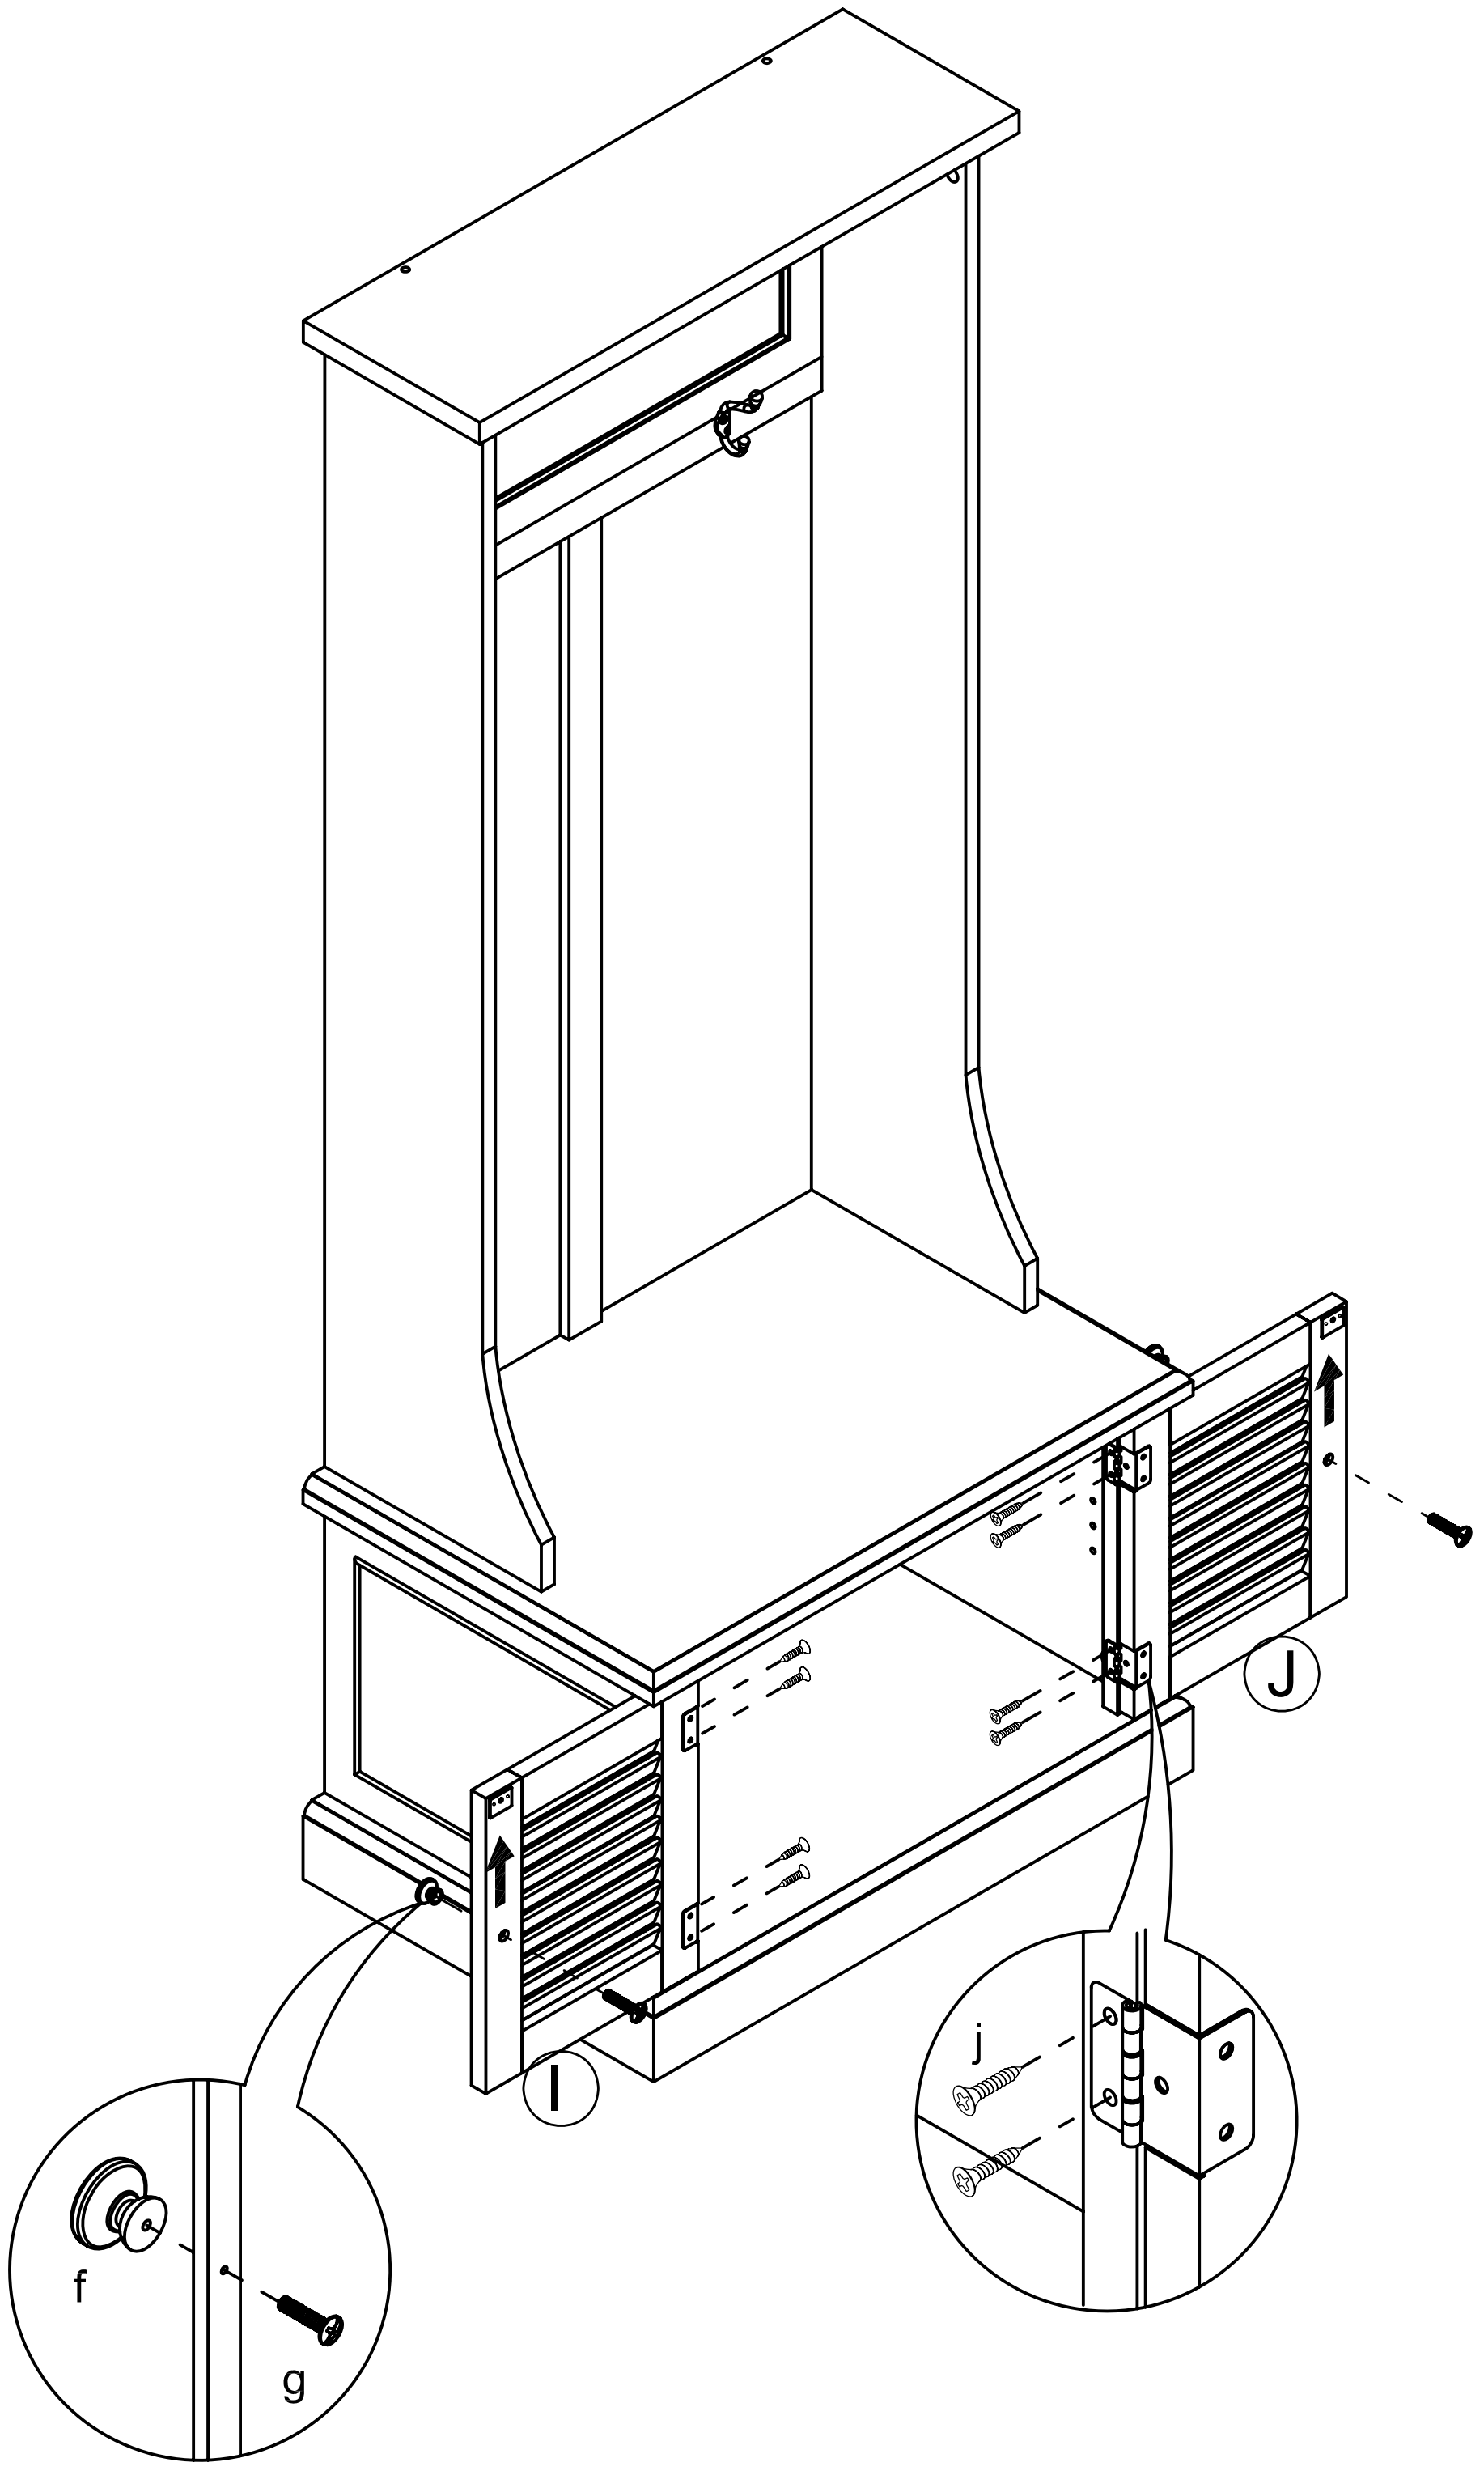FIG 10



- ATTACH THE LEFT DOOR (I) AND THE RIGHT DOOR (J) INTO THE ASSEMBLED PART BY USING THE 1/2”L FLAT HEAD SCREW (j).
- TIGHTEN THE KNOB (f) TO THE LEFT DOOR (I) AND THE RIGHT DOOR (J) BY USING THE KNOB BOLT (g).

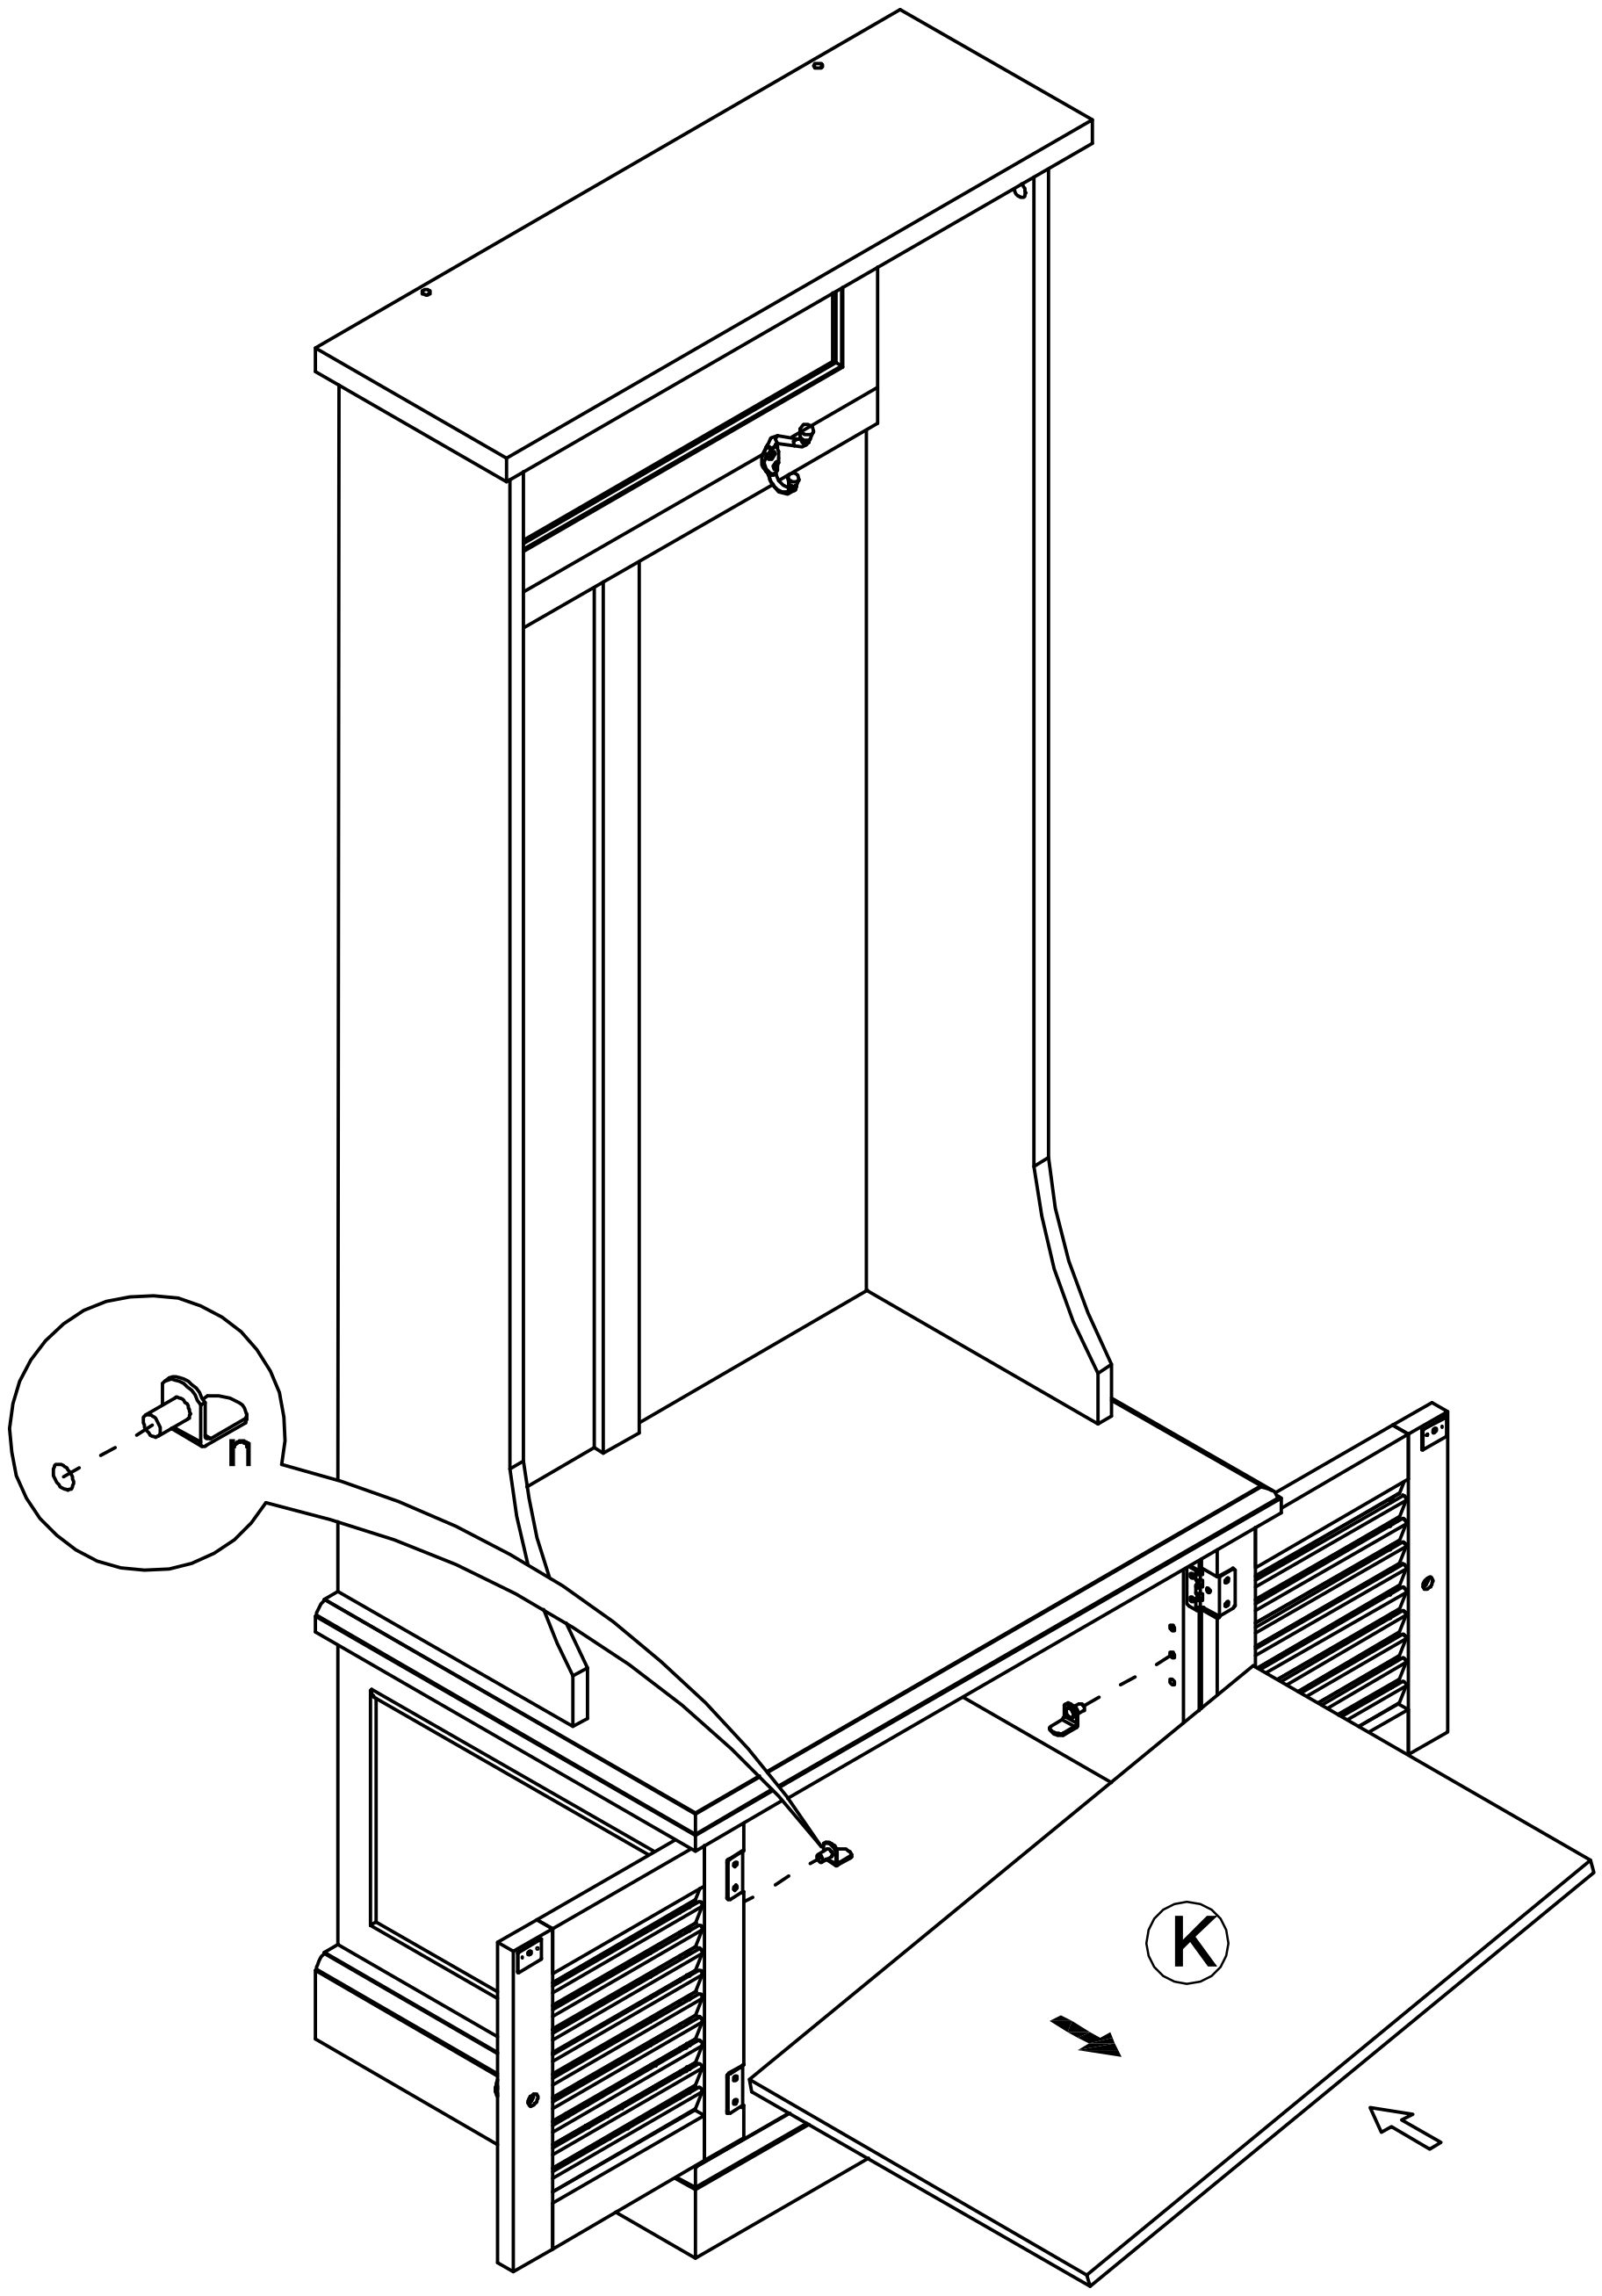FIG 11



● PLACE THE SHELF PIN (n) IN DESIRED POSITION AND PLACE THE ADJUSTABLE SHELF (K) ABOVE THE SHELF PIN (n).